FXSO GATEWAY
In SIP
User Manual
(1FXS/1FXO or 2FXS/2FXO ports)

STEPS IN CONFIGURATION **2**

1. START UP **3**

1.1 INTRODUCTION 3

1.2 FEATURES AND SPECIFICATION 4

1.3 ACCESSORIES AND EQUIP MENT 6

1.4 APPEARANCE 7

2. HOW TO SETUP AND CONNECT BASICALLY **10**

2.1 SYSTEM REQUIREMENT 10

2.2 IP ENVIRONMENT SETTING 11

2.2.1 For Windows 2000/NT *11*

2.3 NETWORK CONFIGURATIONS IN YOUR GATEWAY 13

2.3.1 Static ip address *15*

2.3.2 DHCP mode *17*

2.3.3 PPPoE mode *18*

2.4 MAKING A VOIP CALL 19

2.4.1 Configure the gateway into the Peer-to-Peer mode *19*

2.4.2 Configure the gateway into the Proxy mode *22*

3. ADVANCED **24**

3.1 NETWORK INTERFACE 24

3.2 SIP CONFIG 26

3.3 SECURITY CONFIG 28

3.4 LINE CONFIGURATION 29

3.5 SYSTEM CONFIGURATION 31

3.6 VOICE SETTING 32

3.7 PHONE PATTERN 34

3.8 TONE SETTING 35

3.9 PHONE BOOK 36

3.10 PREFIX CONFIGURATION 38

3.11 ROUTING TABLE 41

3.11.1 Change the default routing *42*

3.11.2 Add a new Routing Table *44*

3.12 FXO PASSWORD 46

3.13 IP PACKET TOS 47

3.14 PASSWORD 48

3.15 RTP PAY LOAD TYPE CONFIGURATION 49

3.16 VERSION AND INFORMATION 50

3.17 ROM UPGRADE 51
3.18 FLASH CLEAN 55
3.19 COMMIT 56
3.20 REBOOT SYSTEM 57

4. COMMAND LIST 58

4.1 HYPER TERMINAL SETTING 58
4.2 COMMAND LIST 61
4.2.1 [help] 61
4.2.2 [quit] 61
4.2.3 [debug] 62
4.2.4 [reboot] 62
4.2.5 [flash] 63
4.2.6 [commit] 63
4.2.7 [ifaddr] 64
4.2.8 [time] 65
4.2.9 [ping] 65
4.2.10 [sysconf] 66
4.2.11 [sip] 68
4.2.12 [security] 70
4.2.13 [line] 71
4.2.14 [route] 74
4.2.15 [prefix] 76
4.2.16 [pbook] 77
4.2.17 [voice] 79
4.2.18 [phone] 82
4.2.19 [tone] 84
4.2.20 [fxopwd] 85
4.2.21 [record] 86
4.2.22 [tos] 95
4.2.23 [pt] 95
4.2.23 [rom] 96
4.2.24 [passwd] 97

Steps in configuration

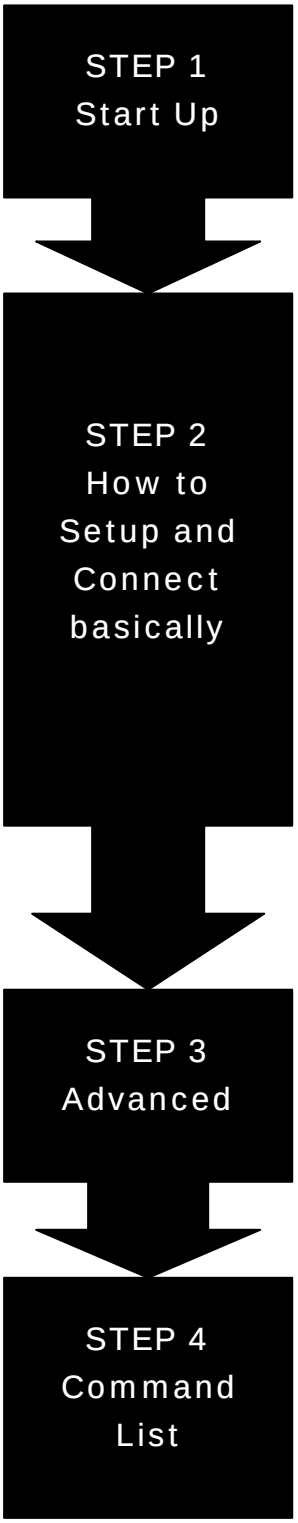

To check out the peripheral equipments and understand the feature of this gateway. Please read this step very carefully before starting the configuring.

Connecting the gateway and computer to start configuring by WEB GUI.

Setting the ip address for this gateway to make sure that it could connect with the internet.

Setting the configurations of dialing, including the Peer-To-Peer, GK mode and how to set these tables to make calls by this gateway easily.
The other configurations of make call will be discussed in this step.

Advanced configurations and special functions of this gateway. Using the WEB GUI to show how to set this table and explain the meaning of these tables.

To explain the meaning of the command in the command line interface and example the usage of the command.
To get more usages or configuration in this step and study about the command line configuration.

1. Start Up

1.1 Introduction

SIPFXSO 1S1O/2S2O is a one-port/two-port FXS+FXO gateway. It supports an innovative intelligent call rouging function that transparently routes calls to destination either through PSTN or Internet.

SIPFXSO 1S1O/2S2O provides voice over IP and FAX over IP services for ITSP/ISP Internet Telephony Services Provider and Office/SOHO IP-PBX application.

Application Architecture

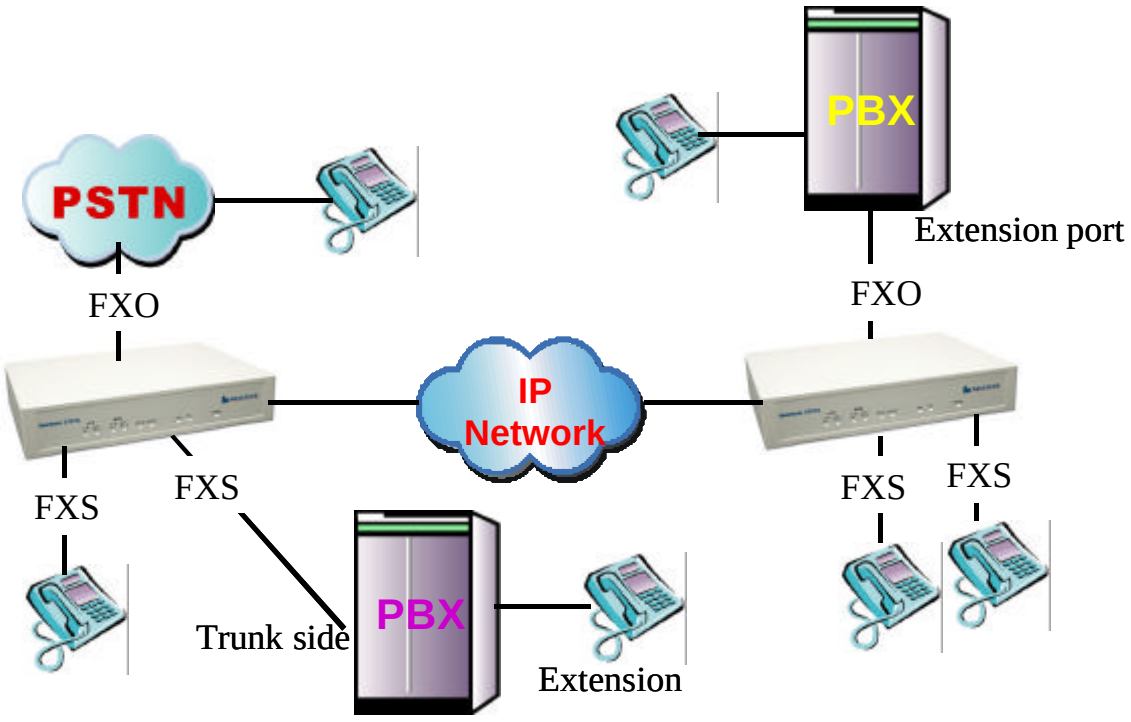

- ***FXO ports can connect with PSTN Line or Extension Line of PBX***
- ***FXS ports can connect with Phone Set or Trunk Line of PBX***

1.2 Features and specification

Features

- IETF RFC 3261
- Automatically Dial Path Selection (IP or PSTN)
- PSTN Line switch to telephone set when power is failure
- PPPoE support
- Behind NAT router or IP sharing device
- DNS server inquiry
- Provide Peer-to-Peer Mode (Non SIP Proxy needed) selection
- E.164 Dial Plan
- TFTP/FTP software upgrade
- Remote configuration/ reset
- LED indication for system status
- Support Fix IP and DHCP

Audio feature

- Codec -- G.711 a/μ law, G.723.1 (6.3kbps), G.729, G.729A
- G.168/165-compliant adaptive echo cancellation
- Dynamic Jitter Buffer
- Completed voice band signaling support
- Provide In-band or RFC2833 DTMF generation/detection
- Provide call progress tone

Management Feature

- TELNET/Console port and Web Browser configuration

Certification

- UL, CE, FCC

FXS Features

- 2-wire loop start
- Programmable On-Hook voltage, Ring voltage/Cadence/Frequency, Loop current
- Line polarity reversal generation

FXO Features

- 2-wire loop start
- Support auto-attendant (Tone or voice greeting)
- PSTN polarity reversal detection
- Disconnect tone detection
- Asking ping function with the incoming calls from PSTN side
- Record and analyze the Tone from PSTN side

Environmental

- Operation temp:0 ℃ to 40 ℃
- Humidity: 10% to 90% (Non-condensing)

1.3 Accessories and equipment

- The voice gateway in 2 FXS and 2 FXO ports or 1 FXS port and 1 FXO port models and two RJ-45 connector (WAN and LAN).
- The AC adapter.
- The CD of user manual.
- The connection cable in RS-232 interface.

1.4 Appearance

Front panel: The LED lights provide related system messages of the gateway.

SIPFXSO 1S1O

SIPFXSO 2S2O

Power: Light on means Gateway is power on, and vice versa.

TEL: Light on means the line is in use (off-hook), and vice versa.

LINE: Light on means the line is in use (off-hook), and vice versa.

Status:

1. LED light on means Gateway has successfully registered to Proxy when it is in the Proxy Mode.
2. LED flash means Gateway is not registered to the Proxy when it is in the Proxy Mode.
3. Or when Gateway is in downloading mode, LED should be flash as well.
4. LED light off means Gateway is in Peer-to-Peer Mode.

Ready:

1. Light on and slow flash means Gateway is in normal mode.
2. Light on and fast flash means Gateway is in downloading mode.

WAN: Connected to Public Ethernet

1. Line- LED light on means Gateway is physically connected to the Ethernet correctly.
2. ACT- LED light on and flash when Ethernet data is being transmitted / received.

LAN: Switch to another device, such as PC

1. Line- LED light on means Gateway is physically connected to the Ethernet correctly.
2. ACT- LED light on and flash when Ethernet data is being transmitted received.

Back panel:

SIPFXSO 1S1O

SIPFXSO 2S2O

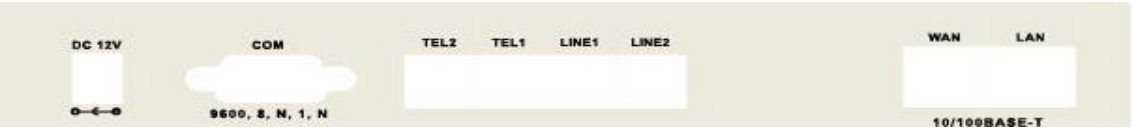

1. **Ethernet Port**

   LAN/WAN: 10/100 Base-T; RJ-45 socket, complied with ETHERNET 10/100base-T.

   The pin-out is as following:

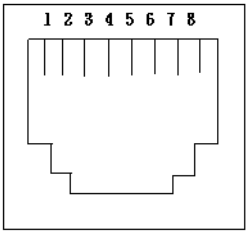

PIN 1, 2: Transmit
PIN 3, 6: Receive

2. **COM:**

   RS232 console port (DB-9pin **male** connector)

   Note: use straightforward cable to connect to your computer.

PINOUTS

Pin	Name	Dir	Description
2	RXD	←	Receive Data

3	TXD	→	Transmit Data
5	GND	—	System Ground

3. **TEL:**

   RJ-11 connector, FXS interface is for connecting the analog phone sets or trunk line of PABX.

4. **LINE:**

   RJ-11 connector, FXO interface is for connecting the extension line of PABX or PSTN Line.

5. **12V DC:**

   Input AC 100V~120V;output DC12V.

2. How to Setup and Connect basically

2.1 System Requirement

1. One PC (a) Pentium 100 or above, 64 RAM, Windows 98 or above.
   (b) Ethernet card or COM port
2. One standard straightforward RS-232 cable (female connector to Gateway side).
3. Analog telephone sets or the PBX trunk Lines.
4. PBX extension Lines or PSTN Lines.
5. Software tools – Hyper Terminal, TELNET, Web Browser.

2.2 IP Environment Setting

User must prepare a valid IP address, complied with IP Network, for Gateway's proper operation.

For testing the validation of chosen IP address, using the same IP configuration in other PC or Notebook, and then try to connect to Public Internet (go to well-known website, receive Internet mail, or ping a specific public IP address). If it works, use the same IP address and network configuration for Gateway.
Please follow up the step for the configuration of your computer or notebook.

2.2.1 For Windows 2000/NT

Please make sure that the network interface of your computer is working fine and the cross over line (RJ-45) is connecting with the computer correctly or you could use a hub to connect with your computer and this gateway. Turn on your computer and configure the network parameter as follow:

1 Go to the **start** menu and enter the **setting** area. Click **control panel**.

2 Enter the network configuration.

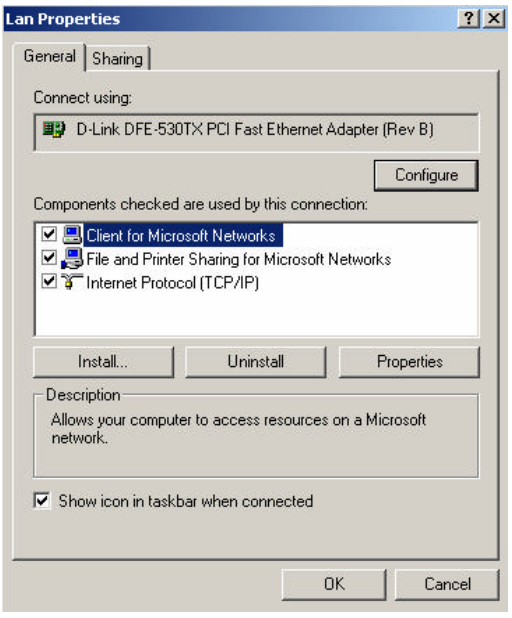

Figure 2.1: Network Configuration

3 Select the **Property** of the LAN card.

4 Setup the ip address, subnet mask and default gateway as below:

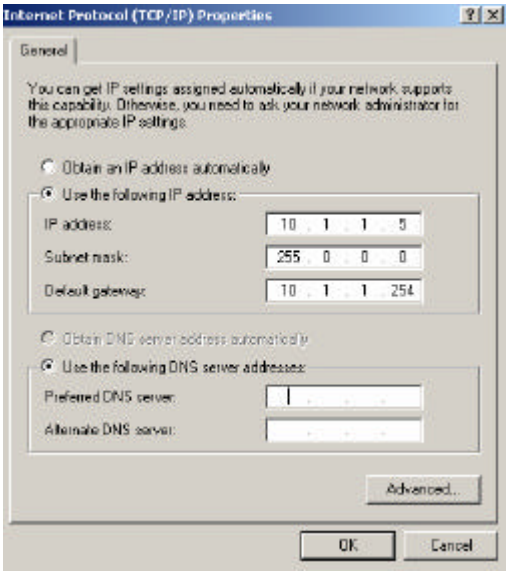
Internet Protocol (TCP/IP) Properties
General
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.
Obtain an IP address automatically
Use the following IP address:
IP address:
10 . 1 . 1 . 5
Subnet mask:
255 . 0 . 0 . 0
Default gateway:
10 . 1 . 1 . 254
Obtain DNS server address automatically
Use the following DNS server addresses:
Preferred DNS server:
Alternate DNS server:
Advanced...
OK
Cancel

Figure 2.2: Configure the network

5 Click OK after you finished the network setup.

The default ip address, netmask and default gateway address of the gateway is 10.1.1.3, 255.0.0.0, 10.1.1.254.

2.3 Network configurations in your gateway

1 Key in the ip address of the gateway (http://10.1.1.3) with the browser. (see figure 2.3)

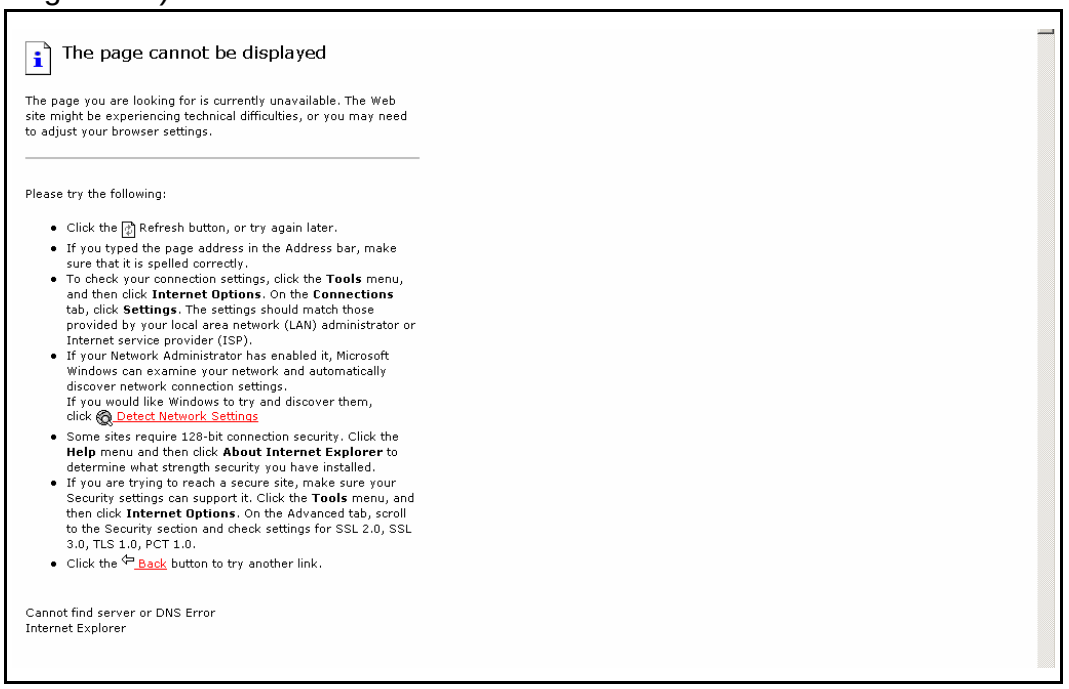
The page cannot be displayed
The page you are looking for is currently unavailable. The Web site might be experiencing technical difficulties, or you may need to adjust your browser settings.
Please try the following:
Click the Refresh button, or try again later.
If you typed the page address in the Address bar, make sure that it is spelled correctly.
To check your connection settings, click the Tools menu, and then click Internet Options. On the Connections tab, click Settings. The settings should match those provided by your local area network (LAN) administrator or Internet service provider (ISP).
If your Network Administrator has enabled it, Microsoft Windows can examine your network and automatically discover network connection settings.
If you would like Windows to try and discover them, click Detect Network Settings
Some sites require 128-bit connection security. Click the Help menu and then click About Internet Explorer to determine what strength security you have installed.
If you are trying to reach a secure site, make sure your Security settings can support it. Click the Tools menu, and then click Internet Options. On the Advanced tab, scroll to the Security section and check settings for SSL 2.0, SSL 3.0, TLS 1.0, PCT 1.0.
Click the Back button to try another link.
Cannot find server or DNS Error
Internet Explorer

Figure 2.3: WEB Browser

2 After key in the ip address, you have to enter the user name and password to enter the WEB configuration. (Username: root ; No password) (see figure 2.4)

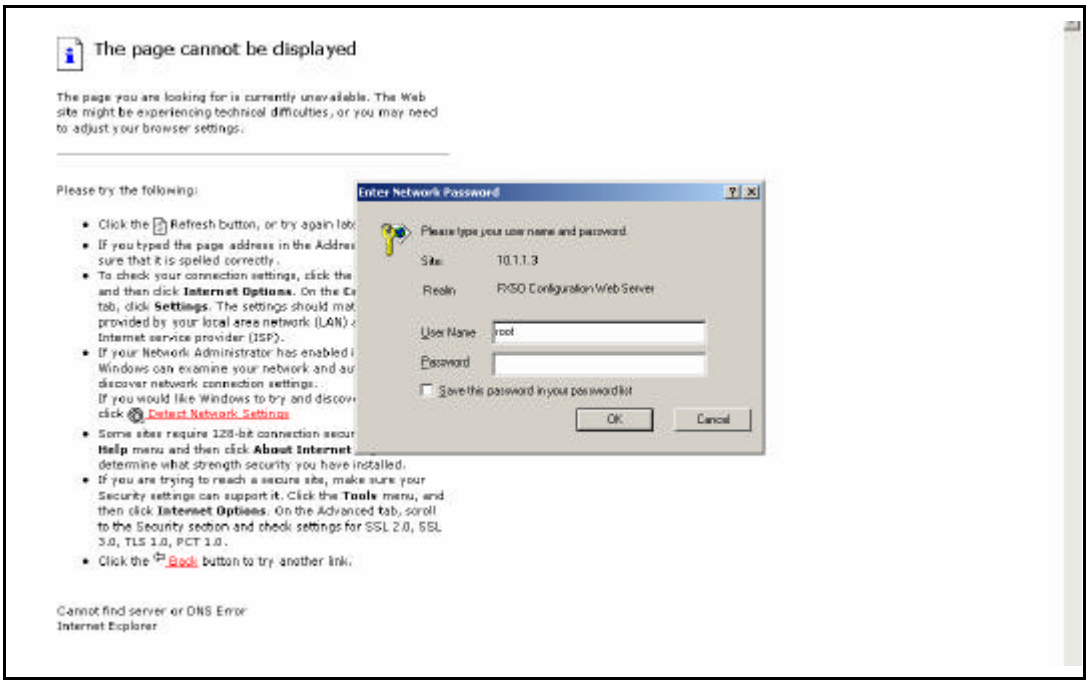
The page cannot be displayed
The page you are looking for is currently unavailable. The Web site might be experiencing technical difficulties, or you may need to adjust your browser settings.
Please try the following:
Enter Network Password
Please type your user name and password.
Site: 10.1.1.3
Realm: FXSO Configuration Web Server
User Name: root
Password:
Save this password in your password list
OK
Cancel
Cannot find server or DNS Error
Internet Explorer

Figure 2.4: Login the username and password

3 You will enter the main page of the configuration after key in the login name and password correctly: (see figure 2.5)

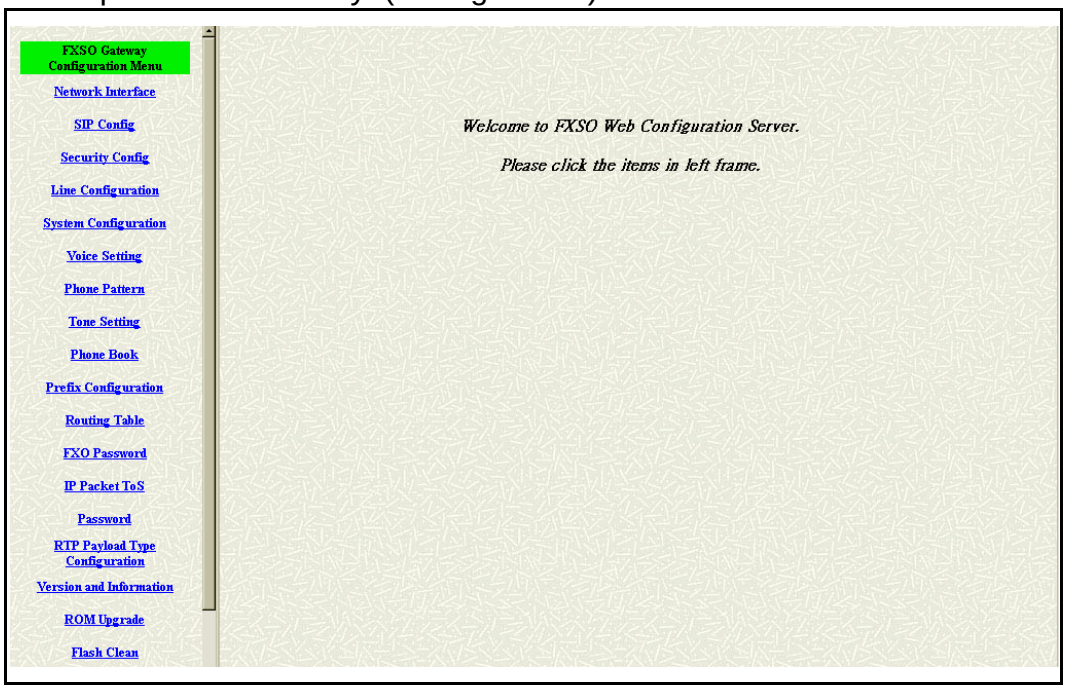

Figure 2.5: The main WEB configuration

4 Press the **Network Interface** to configure the networking of your gateway. (see figure 2.6)

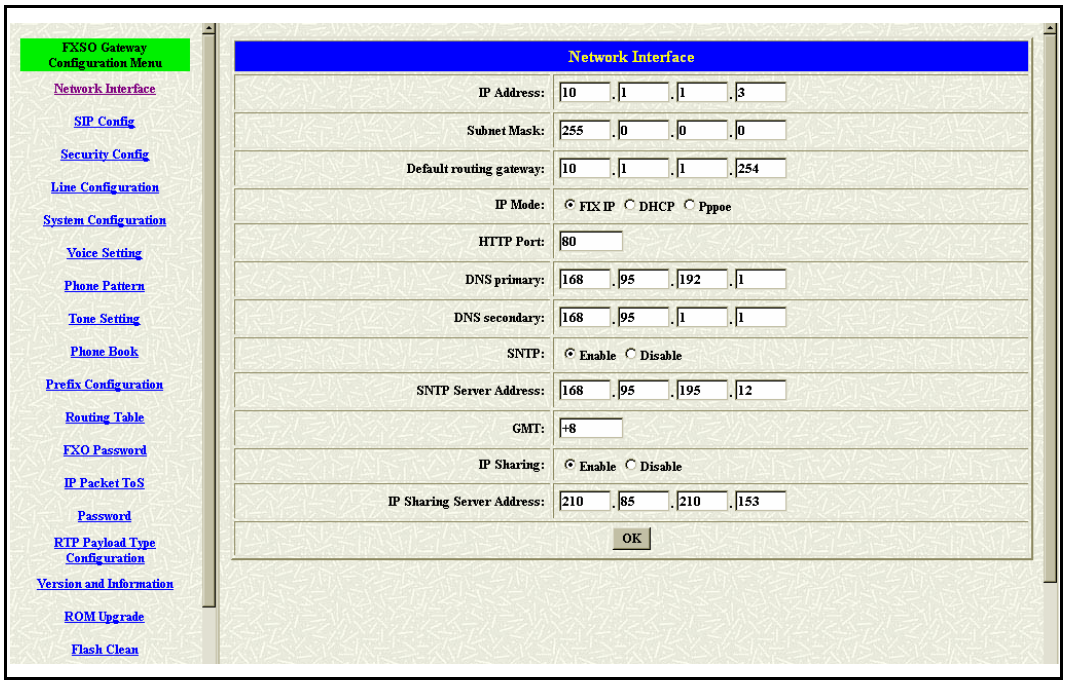
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Network Interface
IP Address: 10 . 1 . 1 . 3
Subnet Mask: 255 . 0 . 0 . 0
Default routing gateway: 10 . 1 . 1 . 254
IP Mode: FIX IP DHCP Pppoe
HTTP Port: 80
DNS primary: 168 . 95 . 192 . 1
DNS secondary: 168 . 95 . 1 . 1
SNTP: Enable Disable
SNTP Server Address: 168 . 95 . 195 . 12
GMT: +8
IP Sharing: Enable Disable
IP Sharing Server Address: 210 . 85 . 210 . 153
OK

Figure 2.6: The Network Interface

2.3.1 Static ip address

1 Please get the correct ip address, netmask and default gateway address from your ISP first. Press the OK button if you finished. (see figure 2.7)

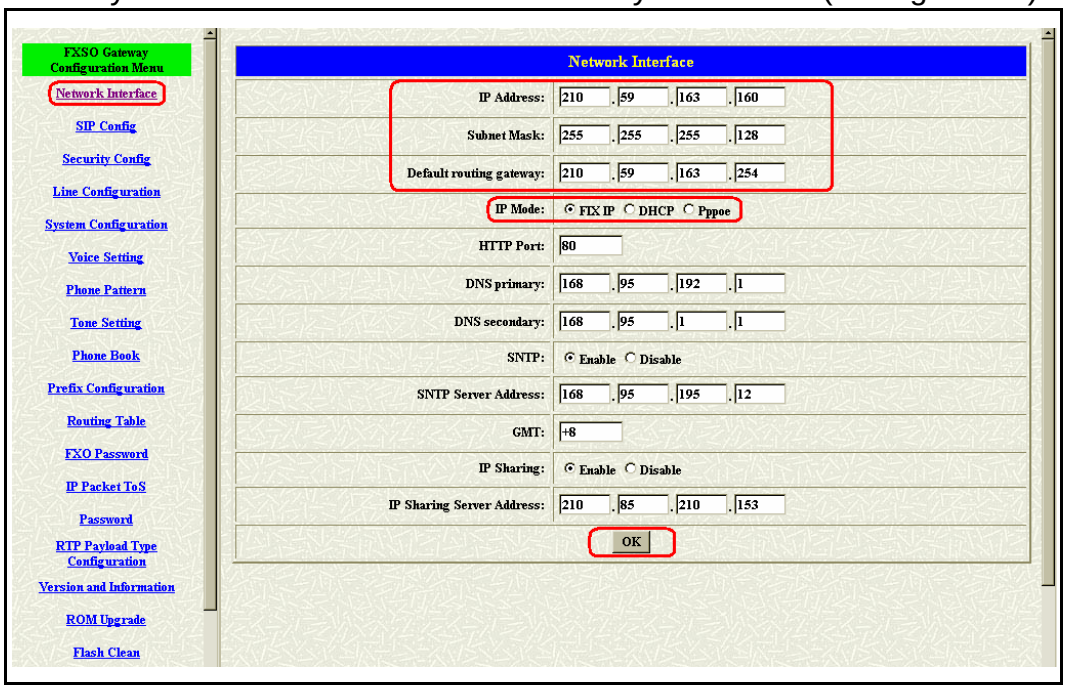
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Network Interface
IP Address: 210 . 59 . 163 . 160
Subnet Mask: 255 . 255 . 255 . 128
Default routing gateway: 210 . 59 . 163 . 254
IP Mode: FIX IP DHCP Pppoe
HTTP Port: 80
DNS primary: 168 . 95 . 192 . 1
DNS secondary: 168 . 95 . 1 . 1
SNTP: Enable Disable
SNTP Server Address: 168 . 95 . 195 . 12
GMT: +8
IP Sharing: Enable Disable
IP Sharing Server Address: 210 . 85 . 210 . 153
OK

Figure 2.7: Configure the static ip address

2 Press the commit if you finish the configuration. (see figure 2.8)

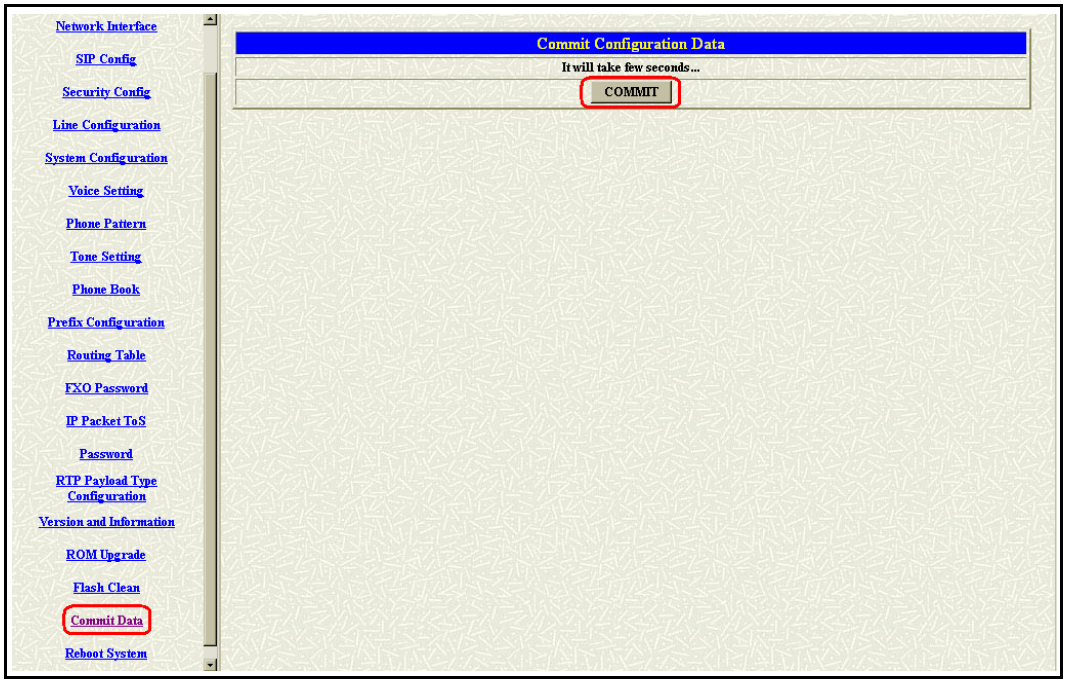

Figure 2.8: Commit the data

3 Press the reboot if you want the configuration executed. (see figure 2.9)

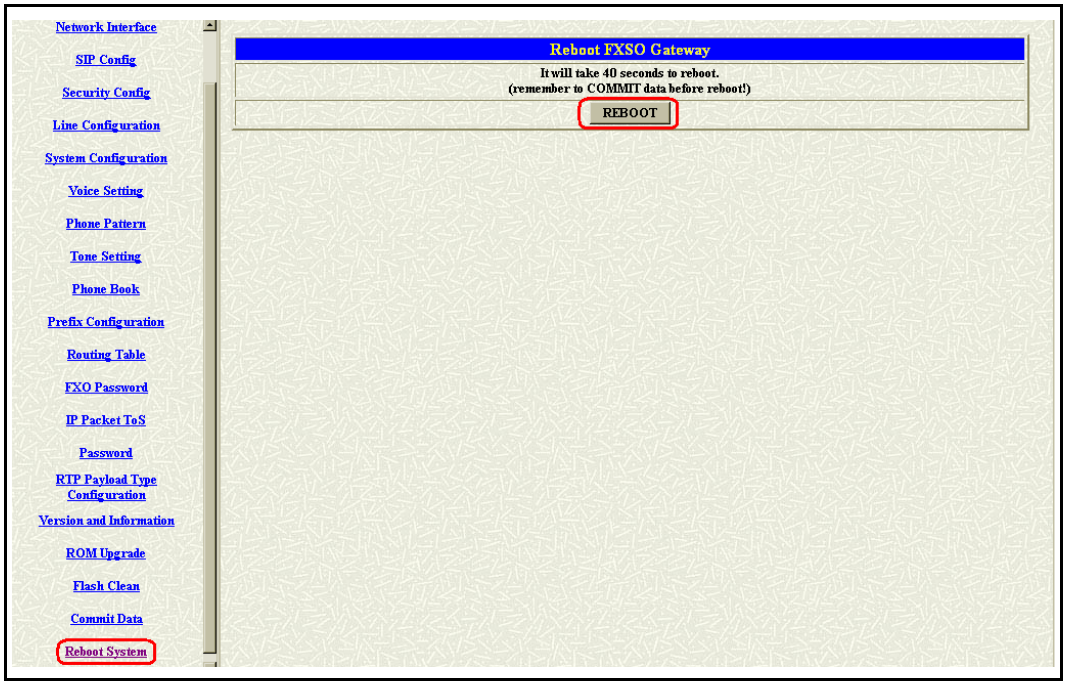

Figure 2.9: Reboot the system

2.3.2 DHCP mode

1 Enable the DHCP if you are using the cable modem or DHCP server. (see figure 2.10)

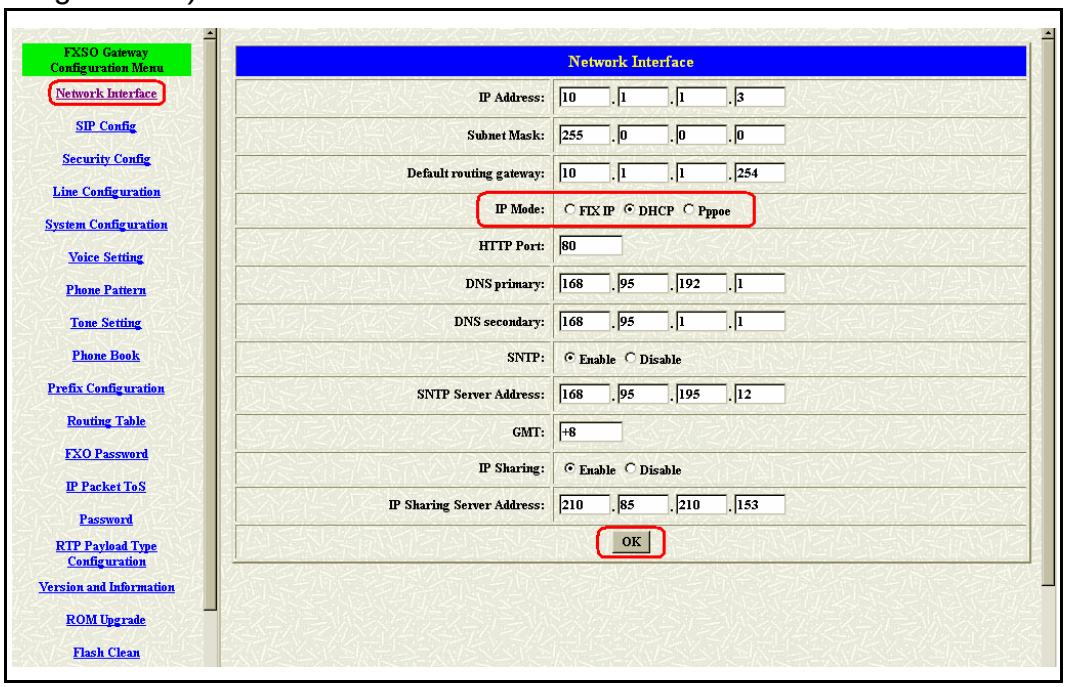
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Network Interface
IP Address: 10 . 1 . 1 . 3
Subnet Mask: 255 . 0 . 0 . 0
Default routing gateway: 10 . 1 . 1 . 254
IP Mode: FIX IP DHCP Pppoe
HTTP Port: 80
DNS primary: 168 . 95 . 192 . 1
DNS secondary: 168 . 95 . 1 . 1
SNTP: Enable Disable
SNTP Server Address: 168 . 95 . 195 . 12
GMT: +8
IP Sharing: Enable Disable
IP Sharing Server Address: 210 . 85 . 210 . 153
OK

Figure 2.10: Enable the DHCP function

2 Please commit the data and reboot the machine after you enable the DHCP function.

2.3.3 PPPoE mode

1 Switch to the PPPoE mode and press the “OK” button. Press the **Network Interface** button after the “OK” button. (see figure 2.11)

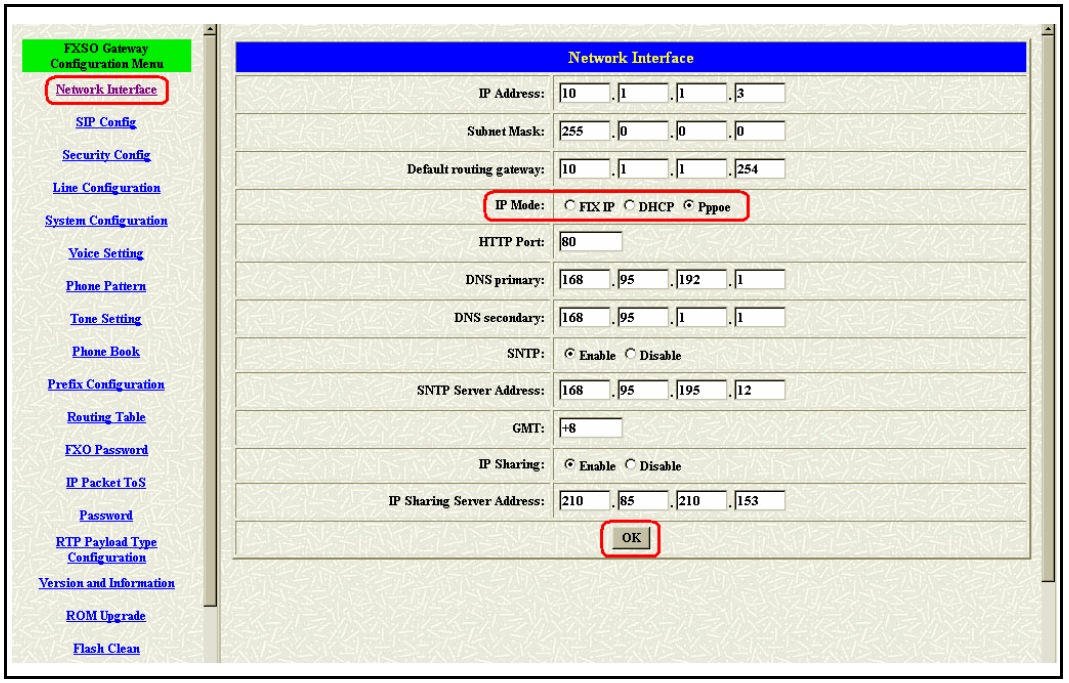
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Network Interface
IP Address: 10 . 1 . 1 . 3
Subnet Mask: 255 . 0 . 0 . 0
Default routing gateway: 10 . 1 . 1 . 254
IP Mode: FIX IP DHCP Pppoe
HTTP Port: 80
DNS primary: 168 . 95 . 192 . 1
DNS secondary: 168 . 95 . 1 . 1
SNTP: Enable Disable
SNTP Server Address: 168 . 95 . 195 . 12
GMT: +8
IP Sharing: Enable Disable
IP Sharing Server Address: 210 . 85 . 210 . 153
OK

Figure 2.11: Switch to the PPPoE mode

2 Enter the Login account and password. Press the “OK” button if the configuration is finished. (see figure 2.12)

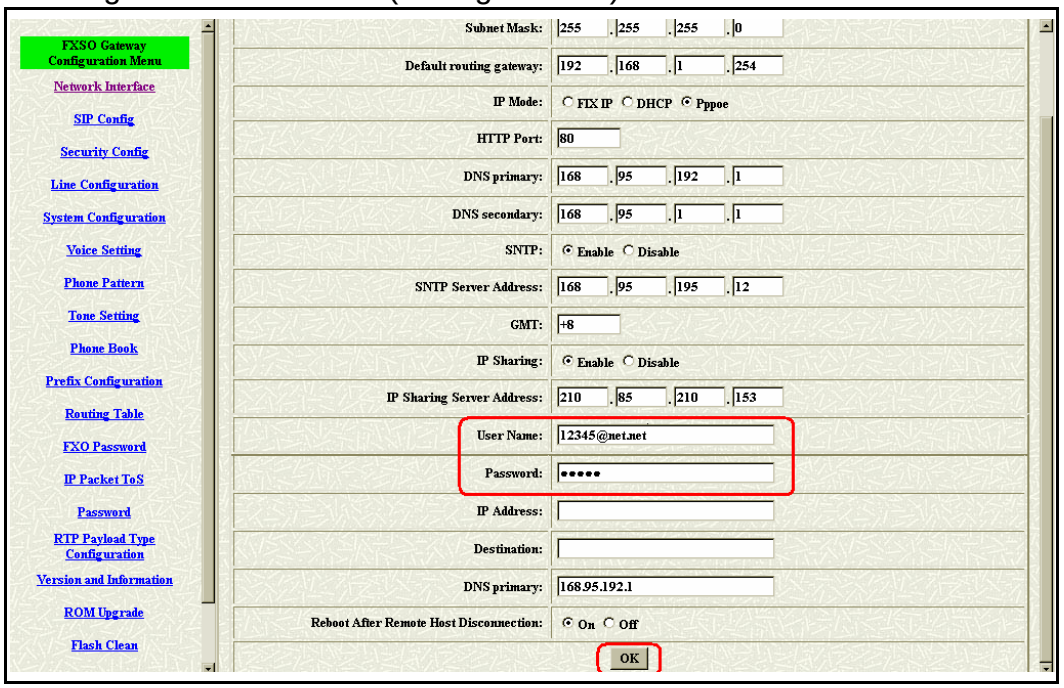

Figure 2.12: Enter the Account and password

2 Please commit the data and reboot the machine after you finished the configuration about the PPPoE function.

2.4 Making a VoIP Call

There are two modes that you could configure the gateway for making VoIP calls. One is the Peer-to-Peer mode, another is Proxy mode. The configurations and functions are different. Please make sure about the mode you want and follow up the step to configure your gateway.

2.4.1 Configure the gateway into the Peer-to-Peer mode

1 Enter the SIP Configuration table and change the mode to Peer-to-Peer. Define the port numbers whatever you like. Press the “OK” button if the configuration is all finished. (see figure 2.13)

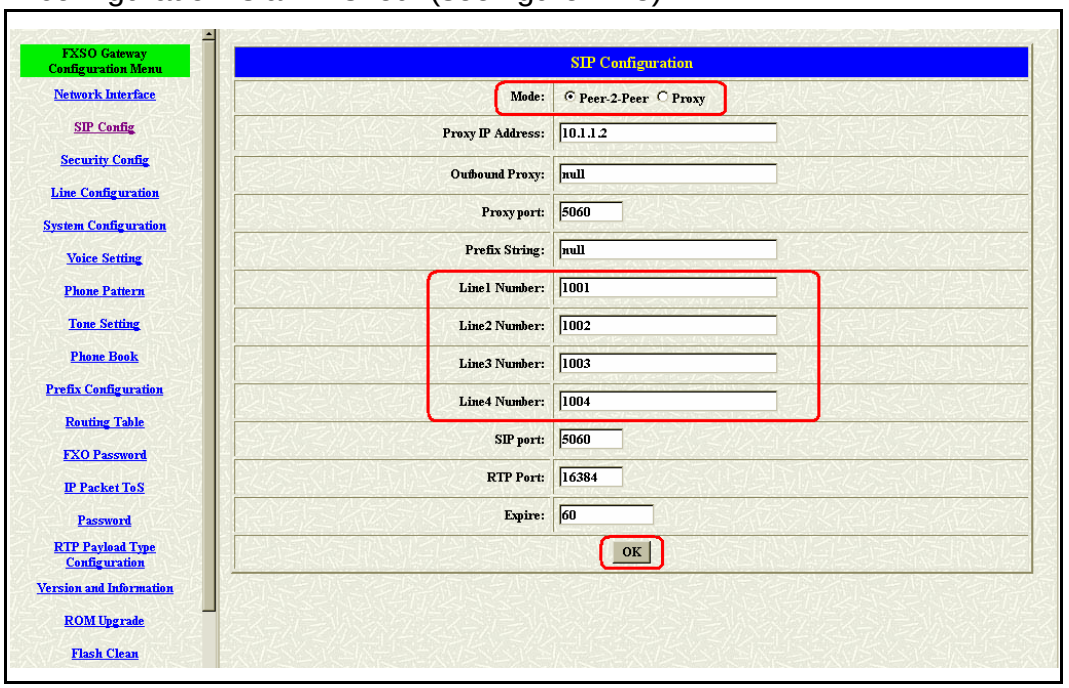

Figure 2.13: Configure the Peer-to-Peer mode

2 Enter the Phone Book configuration table and configure the name, ip address and phone number of the destination. (see figure 2.14)

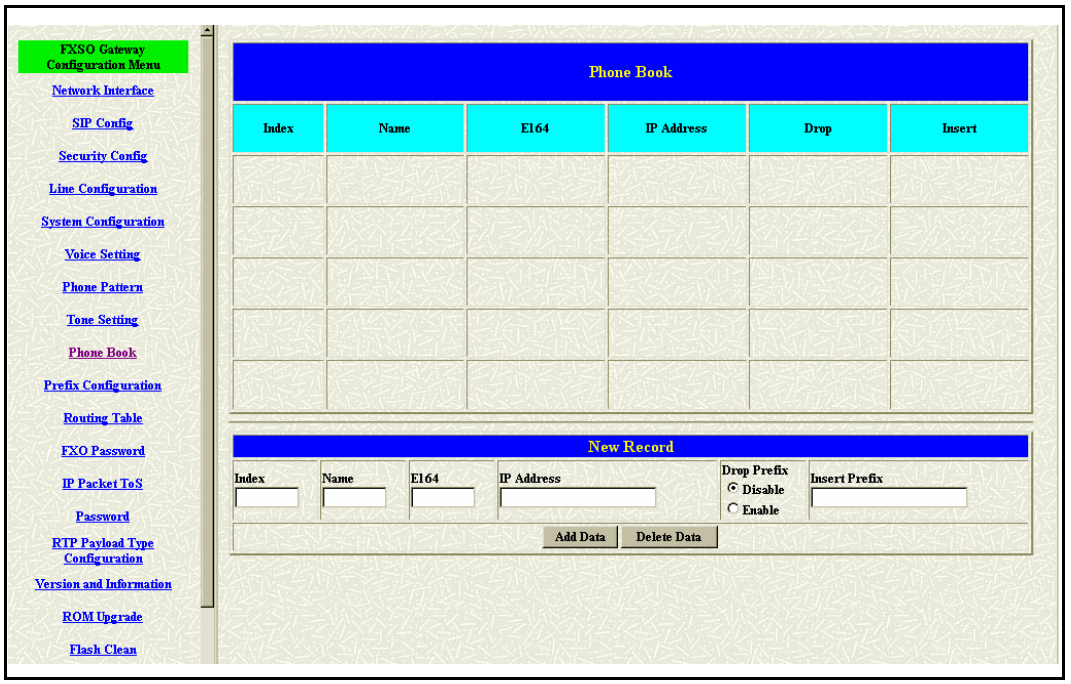

Figure 2.14: Phone Book

【Example】

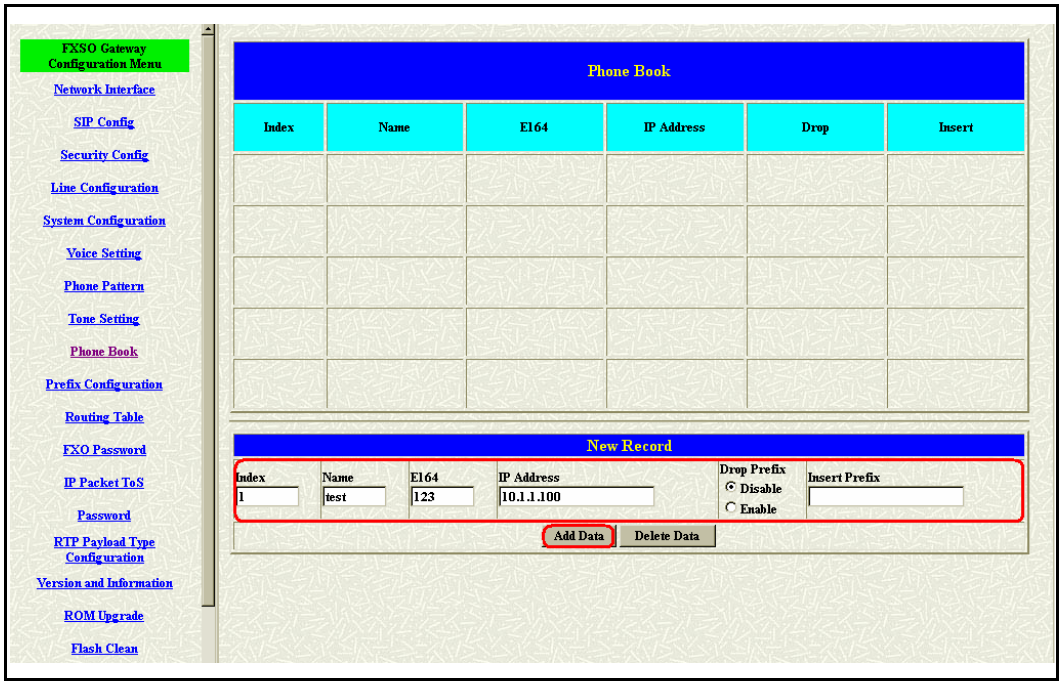

Figure 2.15: The example of Phone Book configuration

The name of the destination: **test**

The E164 number (phone number) of the destination: **123**

The ip address of the destination: **10.1.1.100**

Drop prefix: **Enable – The e164 number you define will be deleted**

Disable – The e164 number you define will be kept

Insert prefix: **To add a number you define in this table**

Press the “Add Data” button when you finished, and the new table will display on the first index if you press the Phone Book configuration button.

4 Please Commit it and Reboot the system if the configuration is finished. (see figure 2.16)

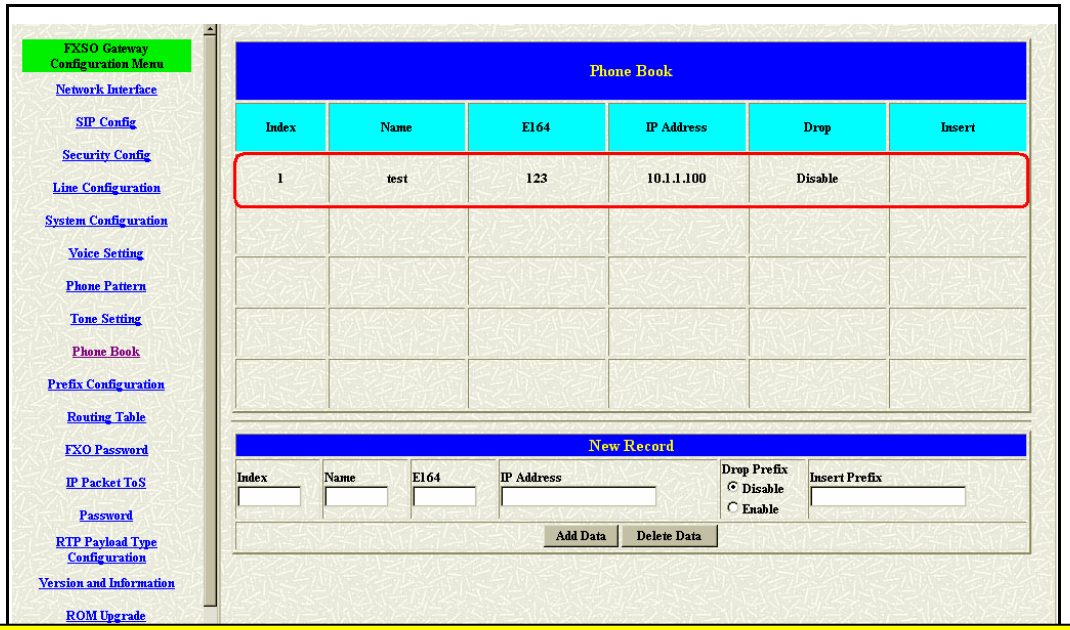

Phone Book is only for the Peer-to-Peer mode and could support forty records.

【The application in the drop and insert function】

Input (E164)	Drop	Insert	Output
100	Disable	X	100
200	Disable	0	0200

300	Enable	X	X
400	Enable	500	500

※ X – Do not enter any numbers

2.4.2 Configure the gateway into the Proxy mode

1 Enter the SIP Config table and change the mode from Peer-to-Peer to Proxy.

To change the Proxy information from your service provider (Ex: The Proxy IP, Domain and Line numbers). (see figure 2.17)

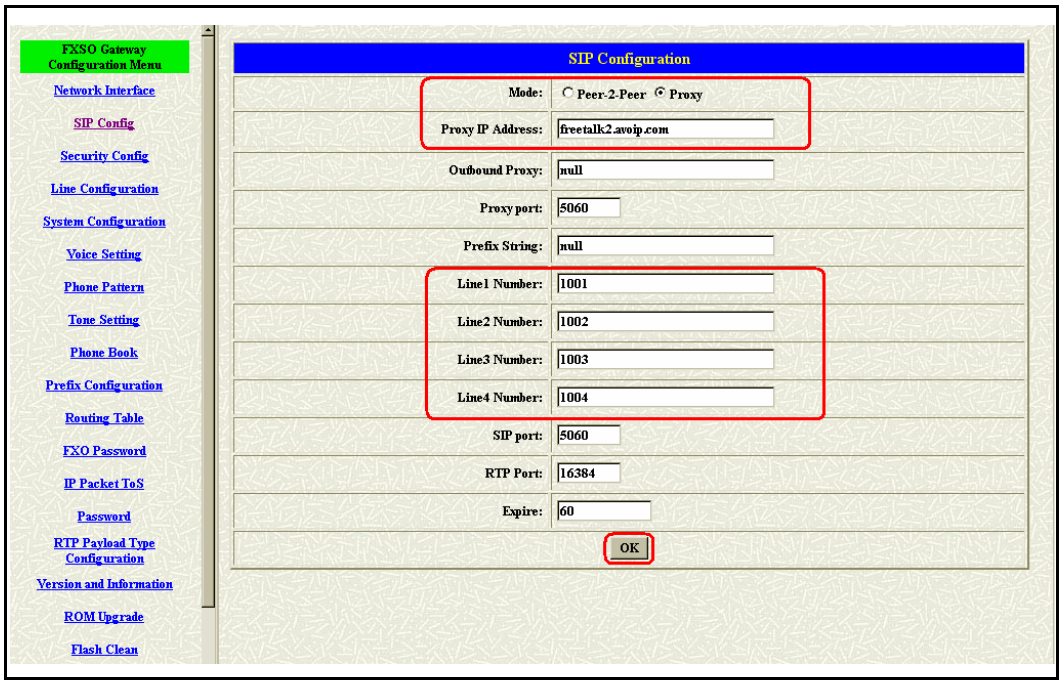

Figure 2.17: Configure the Proxy info

2 Press the OK button that is on the bottom of this page to save the configuration.

3 Switch to the Security Config page and put the user account and password in the correct table. Please get this info from your ITSP. Press the OK button if the configuration is finished. (see figure 2.20)

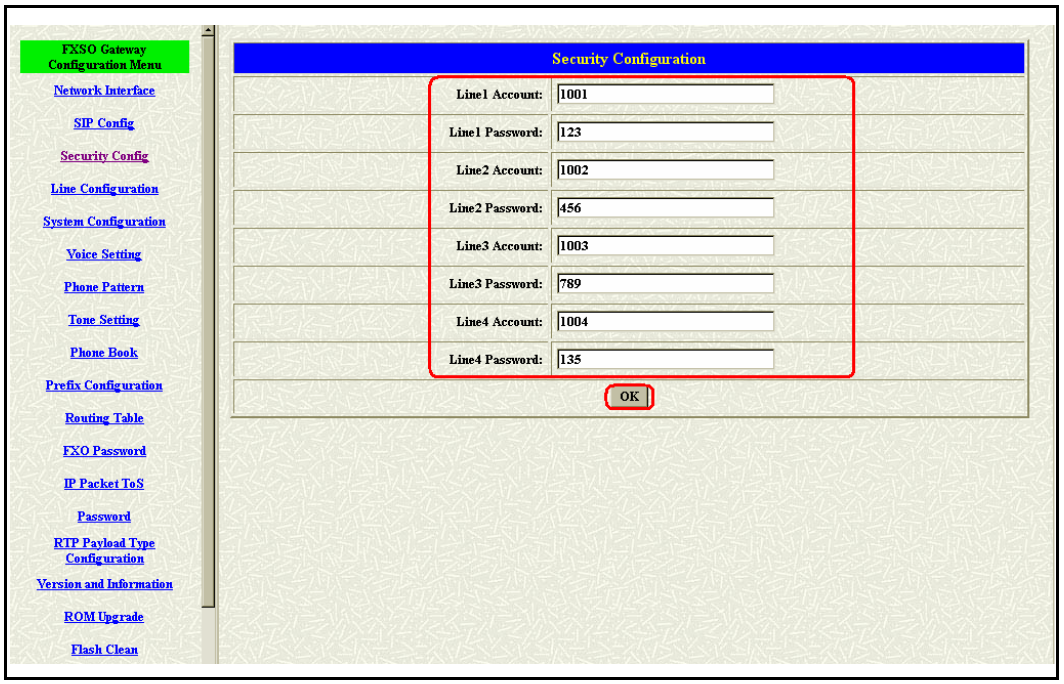

Figure 2.20: Configure the Security info

4 Press the Commit Data and Reboot System buttons when you finished the configuration.

3. Advanced

There are too many advanced commands for the advanced users. The following chapters are based on the application layer. Please get the info what you need. If you need the command, please watching the chapter of Command Line Interface.

3.1 Network Interface

Users have to configure the Network configurations in this page. This gateway will be work while it is connecting with the internet network. Please get more info from the following descriptions. (see figure 3.1)

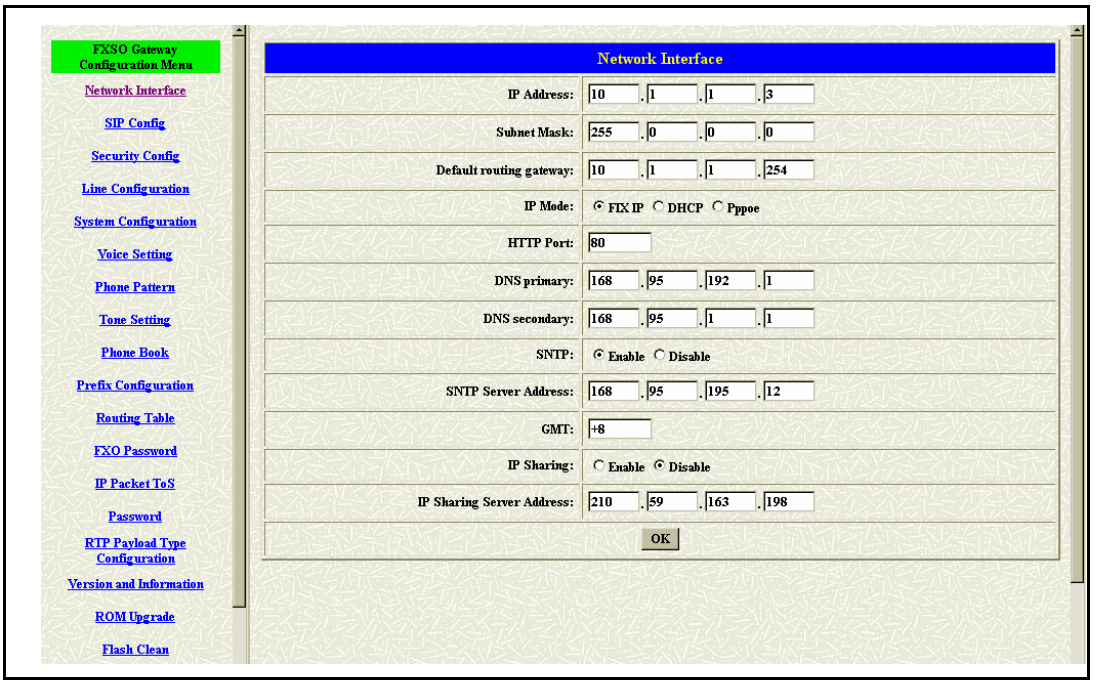
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Network Interface
IP Address: 10 . 1 . 1 . 3
Subnet Mask: 255 . 0 . 0 . 0
Default routing gateway: 10 . 1 . 1 . 254
IP Mode: FIX IP DHCP Pppoe
HTTP Port: 80
DNS primary: 168 . 95 . 192 . 1
DNS secondary: 168 . 95 . 1 . 1
SNTP: Enable Disable
SNTP Server Address: 168 . 95 . 195 . 12
GMT: +8
IP Sharing: Enable Disable
IP Sharing Server Address: 210 . 59 . 163 . 198
OK

Figure 3.1: Network Interface

- IP Address – Define the ip address for your networking if it is the fixed ip. Please get this info from your ISP.
- Subnet Mask – Define the mask address for your networking. Please get this info from your ISP.
- Default Routing Gateway – Define the default gateway for your networking. Please get this info from your ISP.
- IP Mode – To configure the fixed or dynamic ip address for this unit.

Please configure to PPPoE if the ADSL is using the PPPoE type.

- HTTP Port – To configure the HTTP port for access this unit from the remote side.
- DNS primary – To configure the first ip address for the DNS server.
- DNS secondary – To configure the second ip address for the DNS server.
- SNTP – Enable the SNTP server registering function if user wants to get the correct time from the Command Line Interface.
- SNTP Server Address – Enter the correct ip address of the SNTP server or get the incorrect time from the Command Line Interface.
- GMT – Configuring the time area for the time display in the Command Line Interface.
- IP Sharing – Enable this function if the gateway is behind the IP sharing device.
- IP Sharing Server Address – Enter the WAN IP address of the IP sharing device if it is the fixed ip.
- PPPoE User Name – To configure the user name for the PPPoE connection.
- PPPoE Password – To configure the password for the PPPoE connection.
- PPPoE IP Address – In the PPPoE mode, this table will show the ip address that this unit gets from the ISP.
- PPPoE Destination – In the PPPoE mode, this table will show the default gateway address that this unit gets from the ISP.
- PPPoE DNS primary – In the PPPoE mode, this table will show the DNS ip address that this unit gets from the ISP.
- After Remote Host Disconnection – This unit will reboot and re-connect to the ISP

3.2 SIP Config

This WEB page will help user to configure the information about the dial mode, SIP information and the ports for the communication. Please get more info about this configuration from the below detail descriptions. (see figure 3.2)

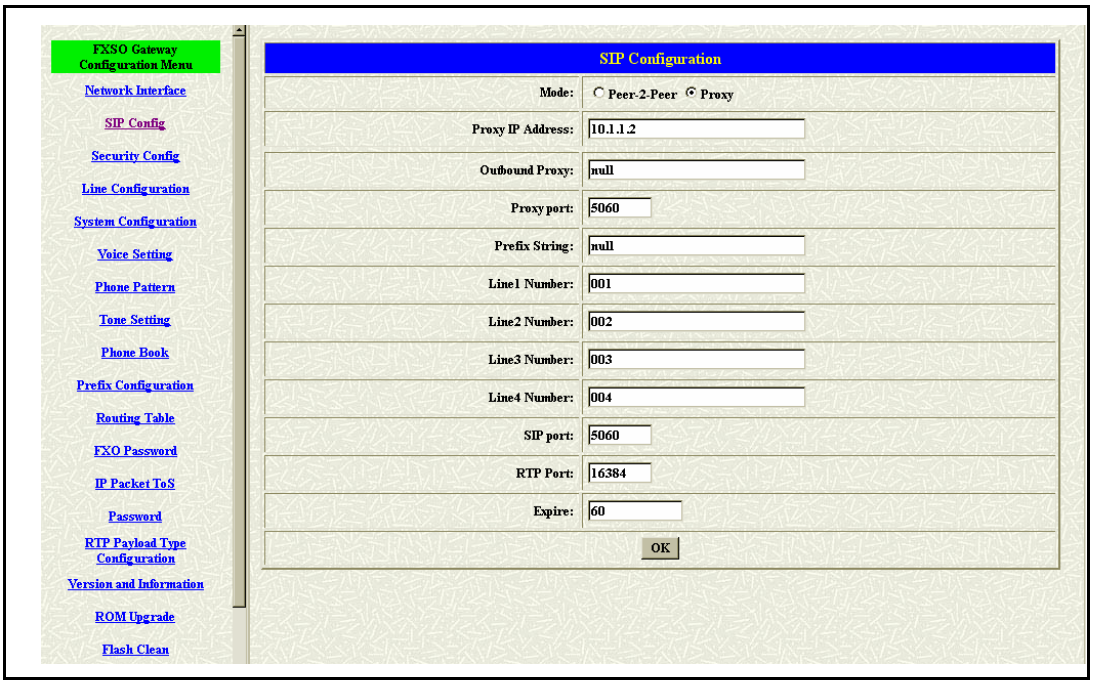

Figure 3.2: SIP Configuration

- Mode – Pick up the calling mode for this gateway.
  - Peer-2-Peer : It only supports the peer-to-peer mode and users have to define the phone book for this mode.
  - Proxy : Users have to register on the Proxy if users picked up this option.
- Proxy IP Address – Enter the proxy ip if users pick up the proxy mode.
- Outbound Proxy – This version could support the outbound proxy, users could define the ip address or domain name in this table.
- Proxy port – Users could change the destination port of the proxy. Before this port changed, please make sure about that the Proxy port could be changed in your proxy. The default value is 5060.
- Prefix String – Users could define this if the registration name was a phonetic alphabet not the numbers.
- Line 1 Number – The phone number of the Tel 1.
- Line 2 Number – The phone number of the Line 1.

- Line 3 Number – The phone number of the Tel 2.
- Line 4 Number – The phone number of the Line 2.
- SIP port – Users could change the sip port of this unit for the registration.
- RTP port – Users could change the beginning RTP ports in this table.
- Expire – Users could change the expire time for the register message sending.

3.3 Security Config

Some proxy will include the security policy. The endpoint may need the user account and password for the registration. If these are necessary, users could put the correct account and password in the correct table. (see figure 3.3)

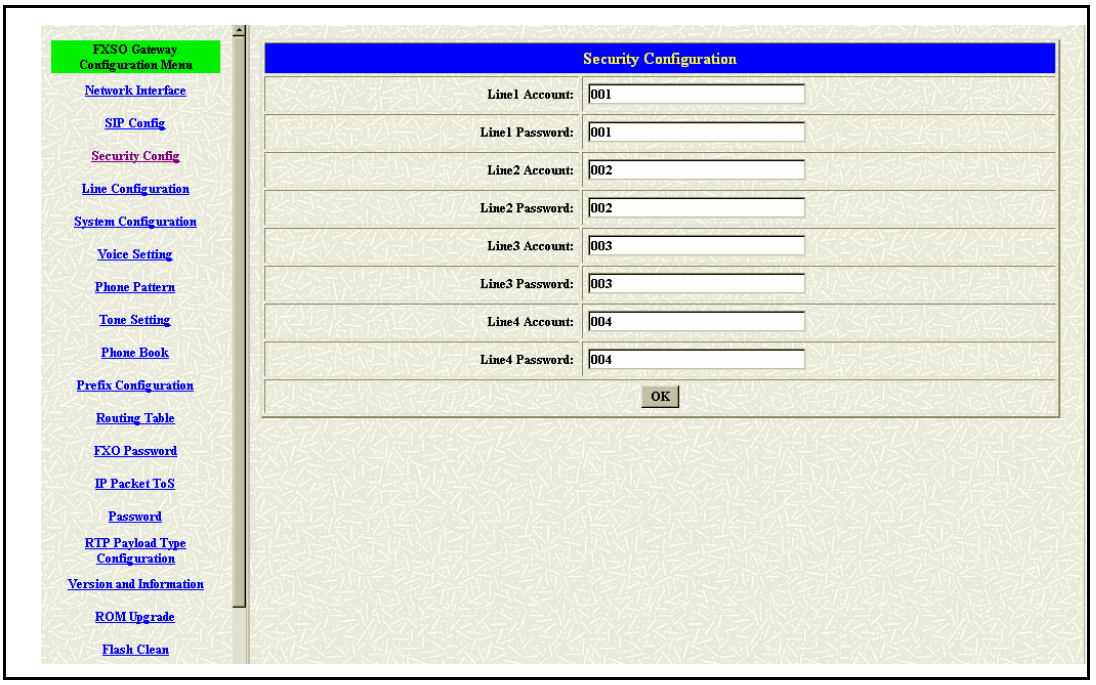

Figure 3.3: Security Configuration

- Line 1 Account – The user name for the line 1 account.
- Line 1 Password – The password for the line 1 account.
- Line 2 Account – The user name for the line 2 account.
- Line 2 Password – The password for the line 2 account.
- Line 3 Account – The user name for the line 3 account.
- Line 3 Password – The password for the line 3 account.
- Line 4 Account – The user name for the line 4 account.
- Line 4 Password – The password for the line 4 account.

3.4 Line Configuration

The Line configuration will show the status of the registrations and the ports. It includes the hunt group, hotline, and no answer forward configuration. Press the Line configuration button to enter configuration table (see figure 3.4)

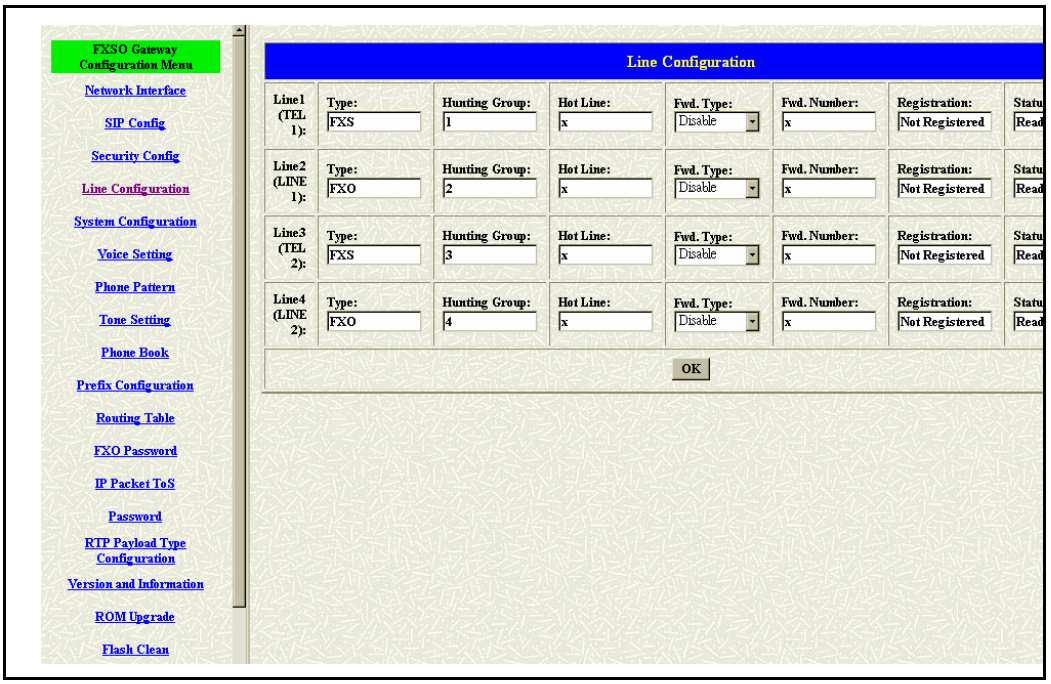
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Line Configuration
Line1 (TEL 1): Type: FXS Hunting Group: 1 Hot Line: x Fwd. Type: Disable Fwd. Number: x Registration: Not Registered
Line2 (LINE 1): Type: FXO Hunting Group: 2 Hot Line: x Fwd. Type: Disable Fwd. Number: x Registration: Not Registered
Line3 (TEL 2): Type: FXS Hunting Group: 3 Hot Line: x Fwd. Type: Disable Fwd. Number: x Registration: Not Registered
Line4 (LINE 2): Type: FXO Hunting Group: 4 Hot Line: x Fwd. Type: Disable Fwd. Number: x Registration: Not Registered
OK

Figure 3.4: Line Configuration

- Type – Show the type of this port. There are only two types of this gateway. One is FXS type another is FXO type. It couldn't be changed.
- Hunting Group – Define the group number of this port. When the port is busy, the call could be transferred to another port in the same group.
- Hotline – Enable or Disable the hotline mode. The hotline mode will be enabled if you enter the hotline number. The default setting is disabled.
- FWD Type – This version could support the call forward with the Proxy. Users could define the forward type in this table. The call forward could only support the FXS port as so far.
  - Disable – This selection will make the forward function disabled.
  - Un conditional – This selection will enable the un-conditional forward function. Every call will be routed to another destination whatever the port is busy or not.
  - Busy – The selection will enable the busy forward function. Every call will be routed to another destination if this port is busy.

The busy forward couldn't be work if users define the hunt group function. This will be work without the hunt group. Please make sure about that the group number is different before you enable the busy forward function.

- No Answer Forward – This selection will enable the no answer forward function. Every call will be routed to another destination if the call didn't answer by someone.

The no answer forward function should be used with the forwardtime command (in the System configuration table). The range of the forward time is 5 to 65535. If the function is enabling, the No Answer forward number is 123, and the forward time is 5 seconds. The call will be forwarded to the destination with 123 numbers when the origin port didn't answer the call.

- Fwd Number – Please put the number for the call forwarding in this table.

The no answer forward function could support the IP or PSTN side. If users want the calls routed to the PSTN side, please define the routing table for some special number.

- Registration – To show the gateway registered on the GK or not.
- Status – To show the port is busy or ready.

3.5 System Configuration

There are some parameters in the system configurations, please get more detail as following. (see figure 3.5)

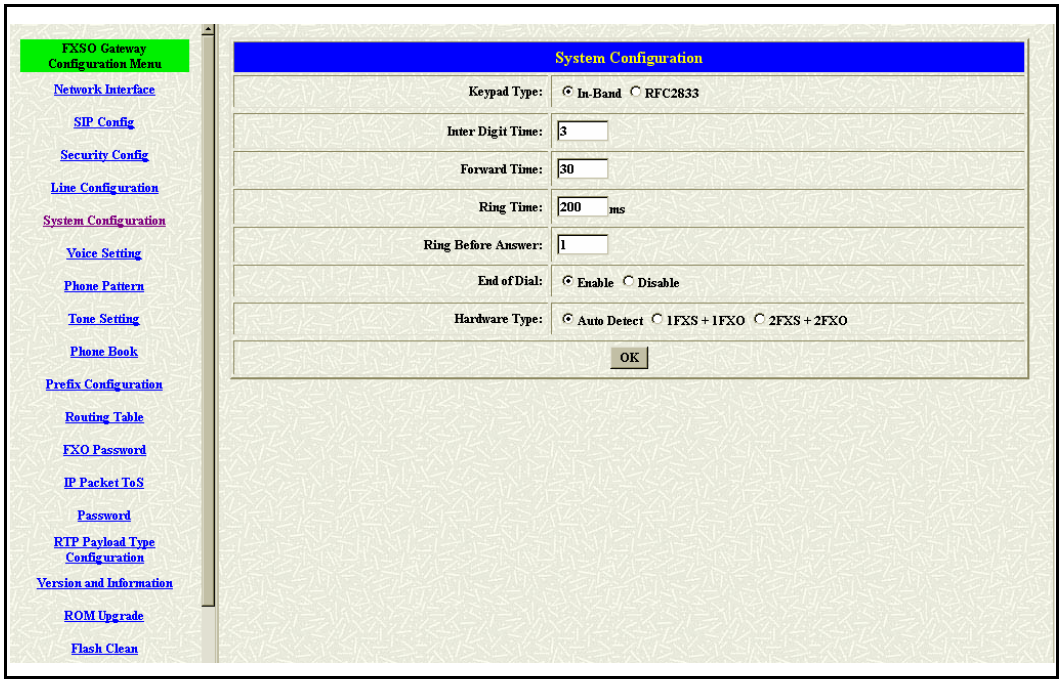

Figure 3.5: System Configuration

- Keypad type – There are tow types for the Keypad. On is the In-Band type, another is the RFC2833 type. User could define the keypad type for the dialing.
- Inter Digit Time – It's the time for the time out during the dialing numbers.
- Forward Time – It's the time for the no-answer-forward. Users have to configure it with the no-answer-forward function.
- Ring Time – FXO will detect the ring tone according this time.
- End of Dial – It will transfer the digit "#" if this function is disabling.
- Hardware Type – It's for the hardware issue.

3.6 Voice Setting

User could define some parameters about the voice in this voice-setting page. (see figure 3.6)

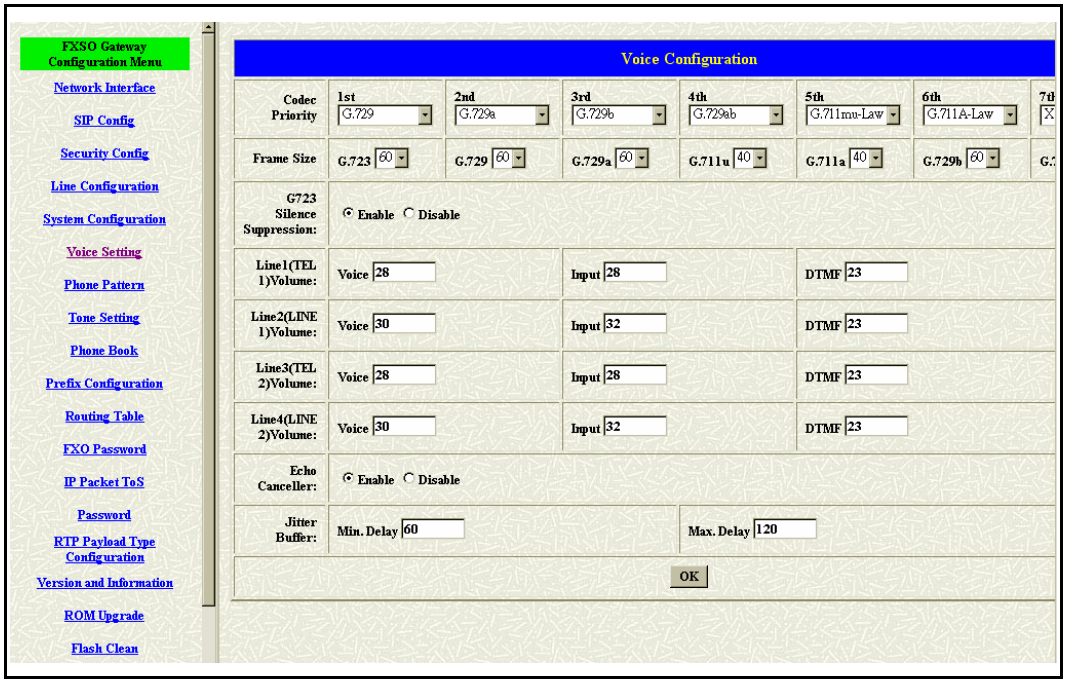

Figure 3.6: Voice Setting

- Codec Priority：It's for the codec setting. User could use the codec, which they want by the setting.

There are two firmware versions for the 2S2O. One is for G.723 only, another is for G.729 only. It with no meanings if users use the G.723 version and configure the codec in G.729. User could check out the firmware version first and configure the codec second. 1S1O could support all the codec at the same times.

- Frame Size：It's the packet size for all codec. It will take more bandwidth if users configure the packet size in the minimum value.
- G723 Silence Suppression：For the VAD and CNG function support.
- Volume：To adjust the gain of the output, input and dtmf.
- Echo Canceller：To enable the echo cancellation function.
- Jitter Buffer：To adjust the Jitter Buffer size to avoid the packets losing.

A large jitter buffer causes increase in the delay and decreases the packet loss. A small jitter buffer decreases the delay but increases the packet loss. The size of the jitter buffer depends on the condition of the network, which varies with time. Typically the packet loss should be less than 10% for a good quality of speech.

3.7 Phone Pattern

The FXSO could generate some tones, such like the busy tone, dial tone, ring back tone and second dial tone…etc. Users could adjust these tones or get the detail info from this page. (see figure 3.7)

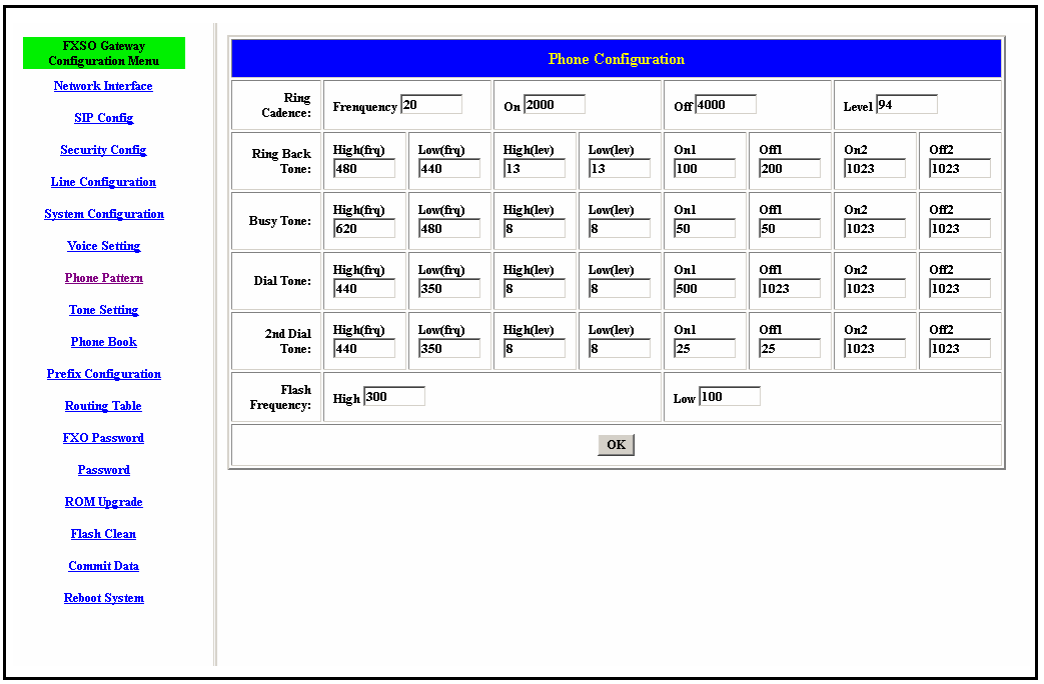
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
Password
ROM Upgrade
Flash Clean
Commit Data
Reboot System
Phone Configuration
Ring Cadence: Frenquency 20 On 2000 Off 4000 Level 94
Ring Back Tone: High(frq) 480 Low(frq) 440 High(lev) 13 Low(lev) 13 On1 100 Off1 200 On2 1023 Off2 1023
Busy Tone: High(frq) 620 Low(frq) 480 High(lev) 8 Low(lev) 8 On1 50 Off1 50 On2 1023 Off2 1023
Dial Tone: High(frq) 440 Low(frq) 350 High(lev) 8 Low(lev) 8 On1 500 Off1 1023 On2 1023 Off2 1023
2nd Dial Tone: High(frq) 440 Low(frq) 350 High(lev) 8 Low(lev) 8 On1 25 Off1 25 On2 1023 Off2 1023
Flash Frequency: High 300 Low 100
OK

Figure 3.7: Phone Pattern

- Ring Cadence – Adjust the pattern for the cadence of the Ring tone. Including the Frequency, On time, Off time and the gain level.
- Ring Back Tone – Adjust the pattern for the Ring Back Tone. Including the High, Low frequency, High, Low Level, and the On, Off time.
- Busy Tone – Adjust the Busy Tone.
- Dial Tone – Adjust the parameters for the dial tone playing.
- 2nd Dial Tone – Adjust the second dial tone.
- Flash Frequency – Adjust the High, Low frequency for the Flash. (unit : ms)

The Flash will affect the call transfer function. Users could define a range for the low and high flash time. Before you change this range, please make sure about that the analog phone set could generate the flash signal in this range. The FXS will know that is the flash signal if the flash time will in this range. For the FXO, it will generate the flash between this range. For example, if the low flash time is 400ms and the high is 800ms, the FXO will generate the 600ms for the flash time.

3.8 Tone Setting

The Tone Setting is for the Tone detecting. The call will be dropped if the pattern of the tone from PSTN side is as same as the pattern in the disconnect tone table. The same result for the Ring Back Tone. User could define the pattern of the disconnect tone if the disconnect tone from PSTN side is not the standard tone. (see figure 3.8)

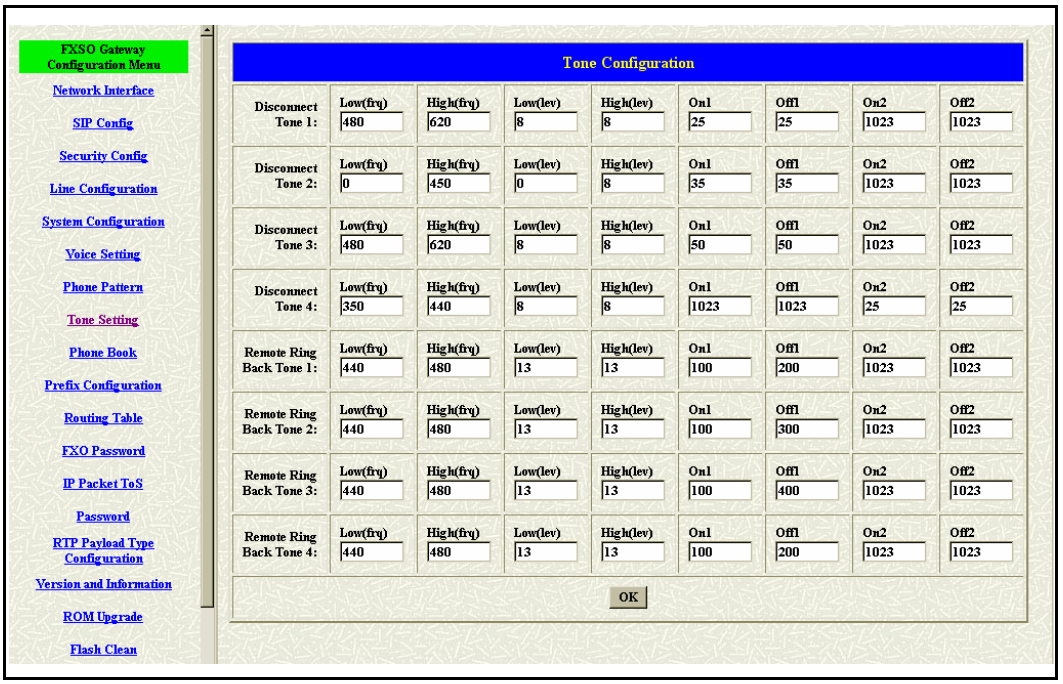
FXSO Gateway Configuration Menu
Network Interface
SIP Config
Security Config
Line Configuration
System Configuration
Voice Setting
Phone Pattern
Tone Setting
Phone Book
Prefix Configuration
Routing Table
FXO Password
IP Packet ToS
Password
RTP Payload Type Configuration
Version and Information
ROM Upgrade
Flash Clean
Tone Configuration
Disconnect Tone 1: Low(frq) 480 High(frq) 620 Low(lev) 8 High(lev) 8 On1 25 Off1 25 On2 1023 Off2 1023
Disconnect Tone 2: Low(frq) 0 High(frq) 450 Low(lev) 0 High(lev) 8 On1 35 Off1 35 On2 1023 Off2 1023
Disconnect Tone 3: Low(frq) 480 High(frq) 620 Low(lev) 8 High(lev) 8 On1 50 Off1 50 On2 1023 Off2 1023
Disconnect Tone 4: Low(frq) 350 High(frq) 440 Low(lev) 8 High(lev) 8 On1 1023 Off1 1023 On2 25 Off2 25
Remote Ring Back Tone 1: Low(frq) 440 High(frq) 480 Low(lev) 13 High(lev) 13 On1 100 Off1 200 On2 1023 Off2 1023
Remote Ring Back Tone 2: Low(frq) 440 High(frq) 480 Low(lev) 13 High(lev) 13 On1 100 Off1 300 On2 1023 Off2 1023
Remote Ring Back Tone 3: Low(frq) 440 High(frq) 480 Low(lev) 13 High(lev) 13 On1 100 Off1 400 On2 1023 Off2 1023
Remote Ring Back Tone 4: Low(frq) 440 High(frq) 480 Low(lev) 13 High(lev) 13 On1 100 Off1 200 On2 1023 Off2 1023
OK

Figure 3.8: Tone Setting

- Disconnect Tone – Users could put the correct pattern of the disconnect tone in this table. The call will be dropped if the tone from PSTN side is match with these patterns. Users could have four tables for the disconnect tone.
- Remote Ring Back Tone – User could adjust this table to help the FXSO gateway to detect the Remote Ring Back Tone. There could be four tables for the configuration.

3.9 Phone Book

The Phone Book configuration is only support the gateway in Peer-to-Peer mode. Please refer the chapter 2 about the Peer-to-Peer mode. (see figure 3.9)

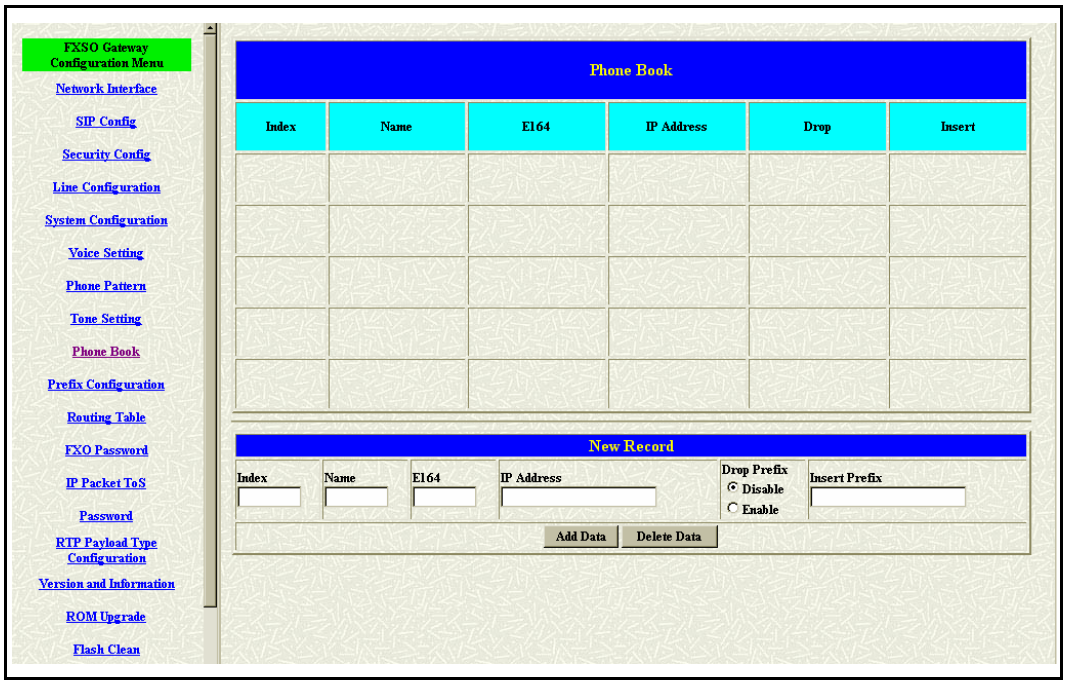

Figure 3.9: Phone Book

- Index – The list number of the Phone Book.
- Name – The name for this contact number.
- E164 – The dialing number for the calling side.
- IP Address – The destination IP address for this phone number.
- Port – The call signal port of the destination.
- Drop – Support the drop function. Enable is for enable this drop function; Disable is for disable this drop function. The Drop Prefix will drop the E164 number, which you had configured in the E164 table.
- Insert – Support the insert digits function.

1. It will be the drop function if user enable the Drop Prefix function and put nothing into the Insert Prefix table.
2. It will be the insert function if user disable the Drop Prefix function and put the digits into the Insert Prefix table.
3. It will be the replace function if user enable the Drop Prefix function and put the digits into the Insert Prefix table.

- Add Data – Press this button if users fill the entire information table above.
- Delete Date – If users want to delete the record from the table, enter the index number first and press this button. The record will be deleted.

3.10 Prefix Configuration

The Prefix functions are using the drop and insert function (see figure 3.6).

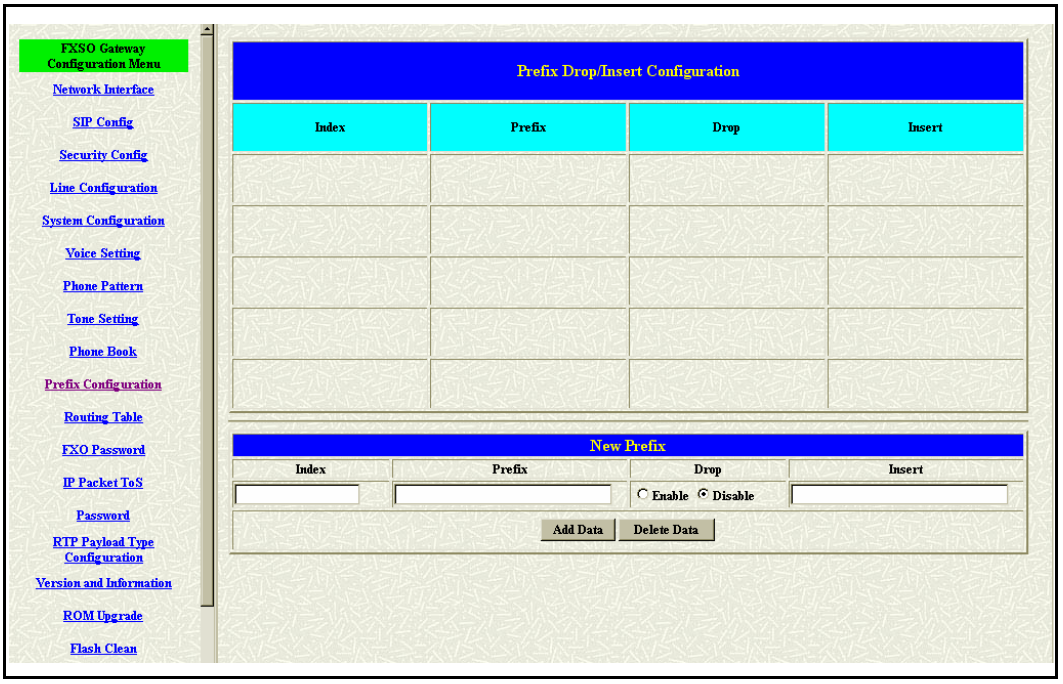

Figure 3.10: Prefix Configuration

- Index – The list number of the Phone Book.
- Prefix – The prefix number of the whole numbers that could be into this gateway
- Drop – The drop function. Enable this function by the Enable button; Disable this function by the Disable button.
- Insert – The insert function. Users could enter the digits that you want to insert in this number.
- Add Data – Press this button if users fill the entire information table above.
- Delete Date – If users want to delete the record from the table, enter the index number first and press this button. The record will be deleted.

This function is just like the Phone Book configuration. But it will make the drop and insert function in the GK routed mode. All the numbers into this gateway will check out the prefix table first and find out the destination in the Routing Table.

There is an example about the configuration, please follow up these steps.

1 Press the Prefix Configuration button to enter the configuration table (see figure 3.10)

2 Enter the index number. Put the prefix numbers you will dial in the prefix table, enable (disable) the drop function and enter the numbers you want to insert (see figure 3.11)

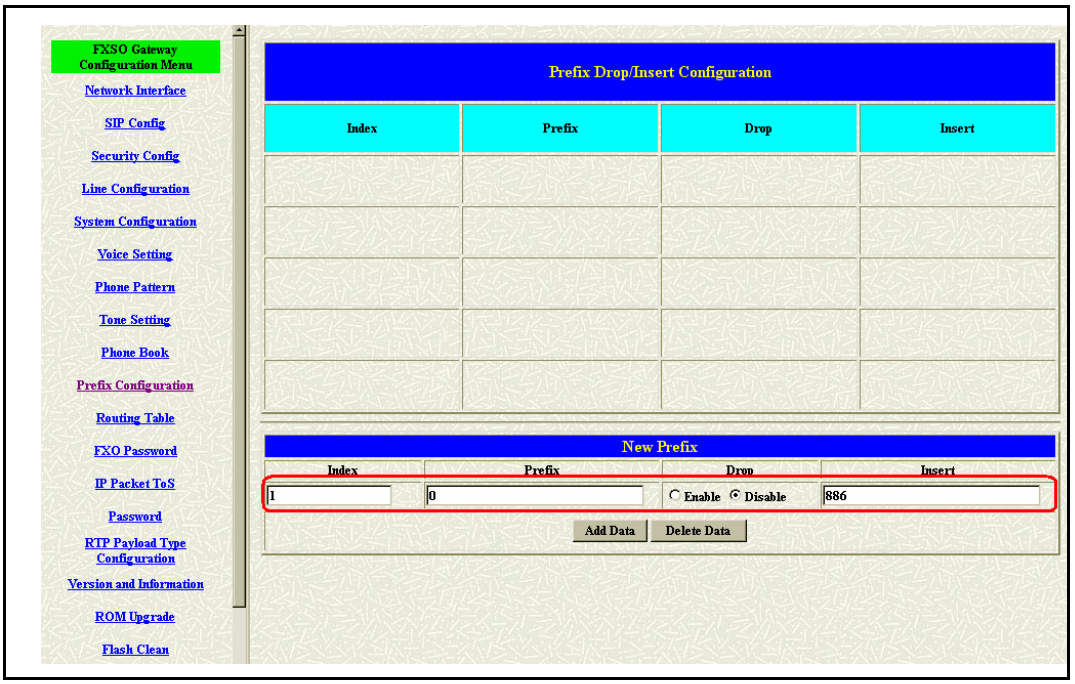

Figure 3.11: Configure the Prefix Table

The usage is as same as the drop, insert function of the Phone Book.

Input (Prefix)	Drop	Insert	Output
100	Disable	X	100
200	Disable	0	0200
300	Enable	X	X
400	Enable	500	500

3 Press the Prefix Configuration button to reload the configuration table (see figure 3.12)

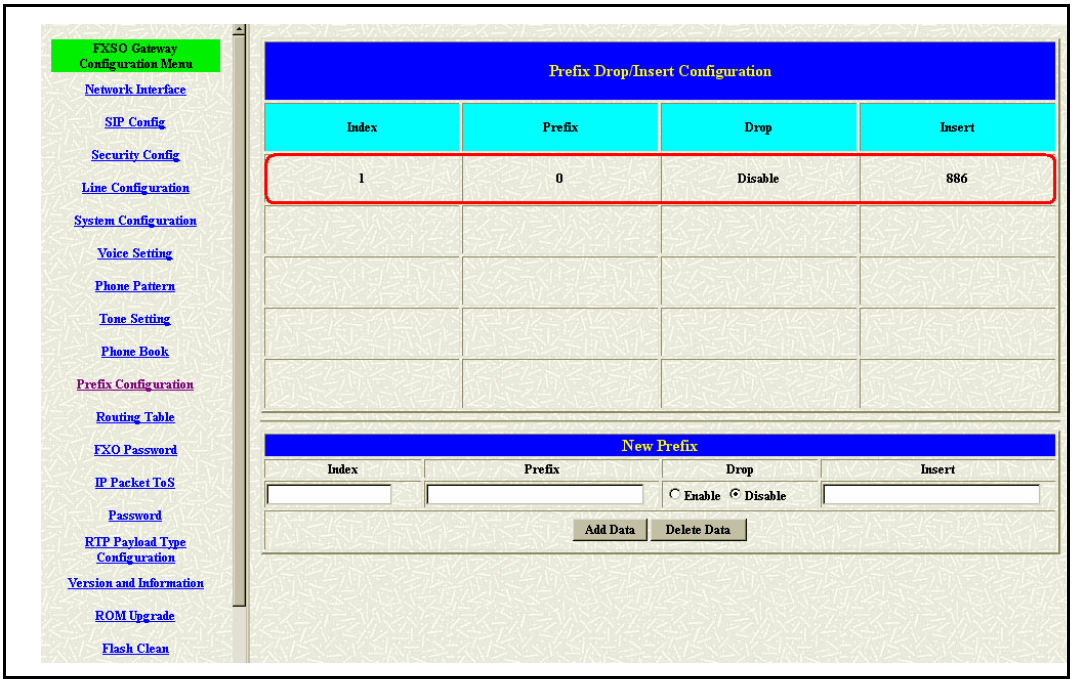

Figure 3.12: Show the added table

4 Please Commit it and Reboot the system if the configuration is finished.

3.11 Routing Table

Routing Table is a rule to define the destination of the calls you make. You could define the rules by the number you dial or by the ports. The Routing Table button will show you the configuration table (see figure 3.13).
In fact, there are three directions of the incoming calls (from IP, FXS and FXO side). The explanation of the default routing is as below:

The location with the incoming calls	The location with the destination	The explanation
IP (Default)	Fxs	The destination will be the FXS port when the calls from the IP side without any define rules.
Fxs (Default)	IP	The destination will be the IP side when the calls from the FXS port without any define rules.
Fxo (Default)	IP	The destination will be the IP side when the calls from the FXO port without any define rules.

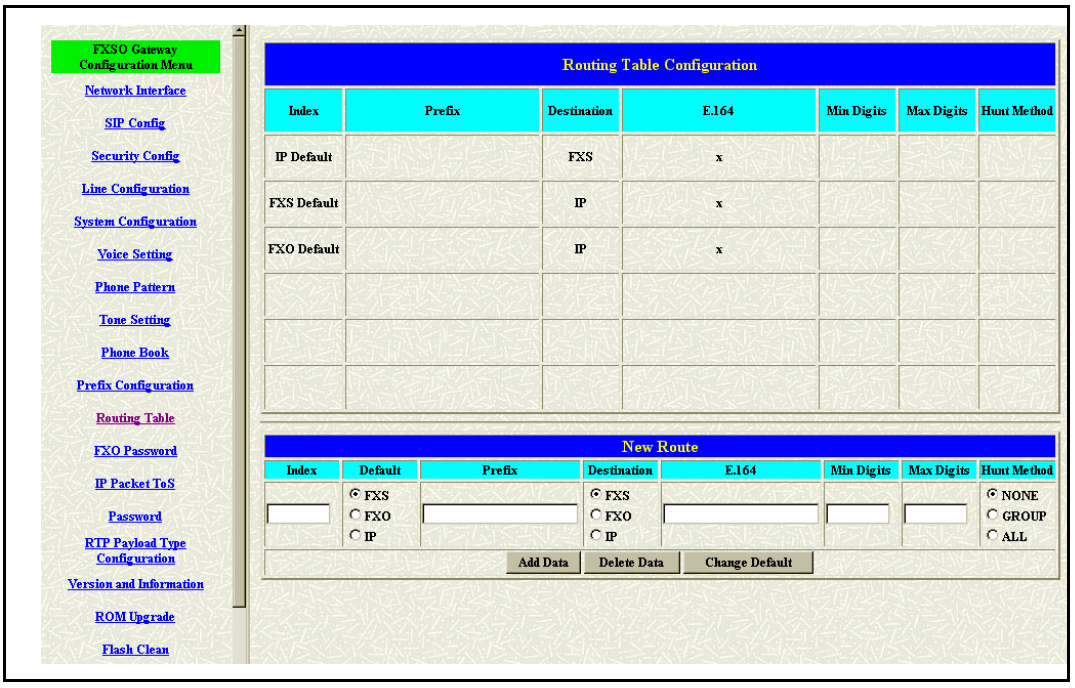

Figure 3.13: Routing Table Configuration

◆ Index – The list number of the Route Table.

- Default – For change the default setting. Users have to pick the direction for the default setting changed.
- Prefix – The prefix number for the dialed digits. The call will be followed this route table if the prefix number was matched.
- Destination – To decide the destination for this route table.
- E.164 – The E.164 number of the destination.
- Mini Digits – The mini digits requirement for this route table.
- Max Digits – The max digits requirement for this route table.
- Hunt Method – Enable the Hunt Group function and pick up the hunt type.
  - NONE : Disable the Hunt Group function.
  - GROUP : The Hunt Group function will working for the same group. User could configure the group in the Line Configuration table.
  - ALL : The Hunt Group will working for the same type.

None – Disable this function
Group – The call will search other ports to be the destination with the same group if the origin destination is busy.
All – The call will search other ports to be the destination with the same type if the origin destination is busy.
About the Group setting, Please get more info from the Line Configuration.

- Add Data – Add a new record for the route table.
- Delete Data – Delete a record for the route table.
- Change Default – Change default route table.

3.11.1 Change the default routing

Please follow up the steps if you want to change the default routing:

1 Pick up the side for the incoming calls and define the destination of this side.

Press the Change Default to save the data. (see figure 3.14)

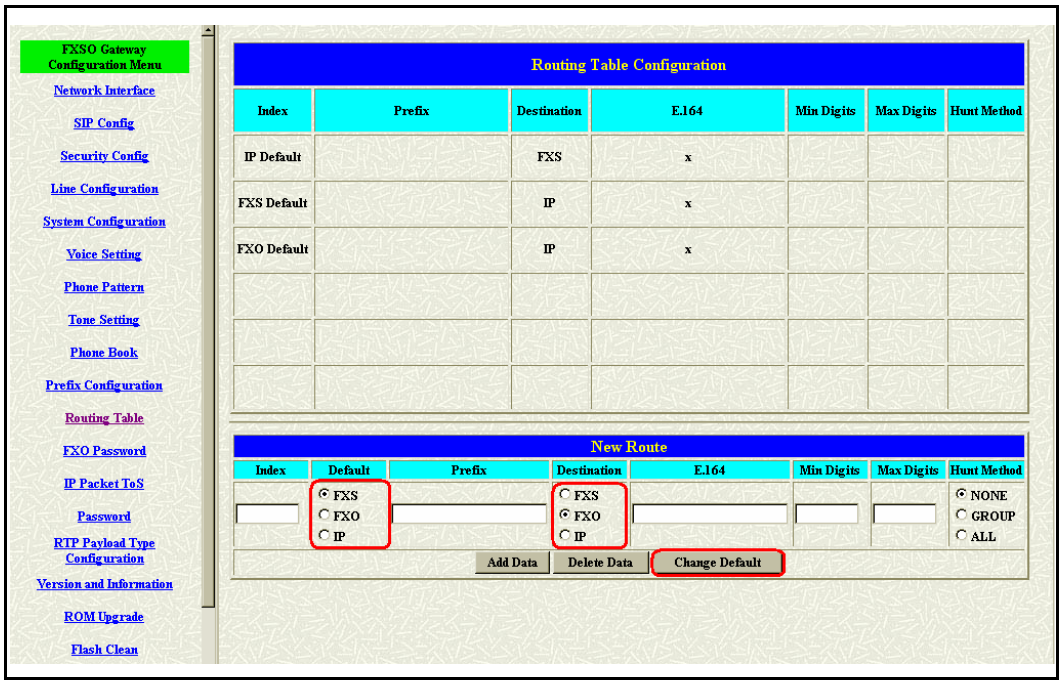

Figure 3.14: Change the Default Setting

2 The default setting is changed after you press the Change Default button.

Please press the Routing Table button again to show the new setting. (see figure 3.15)

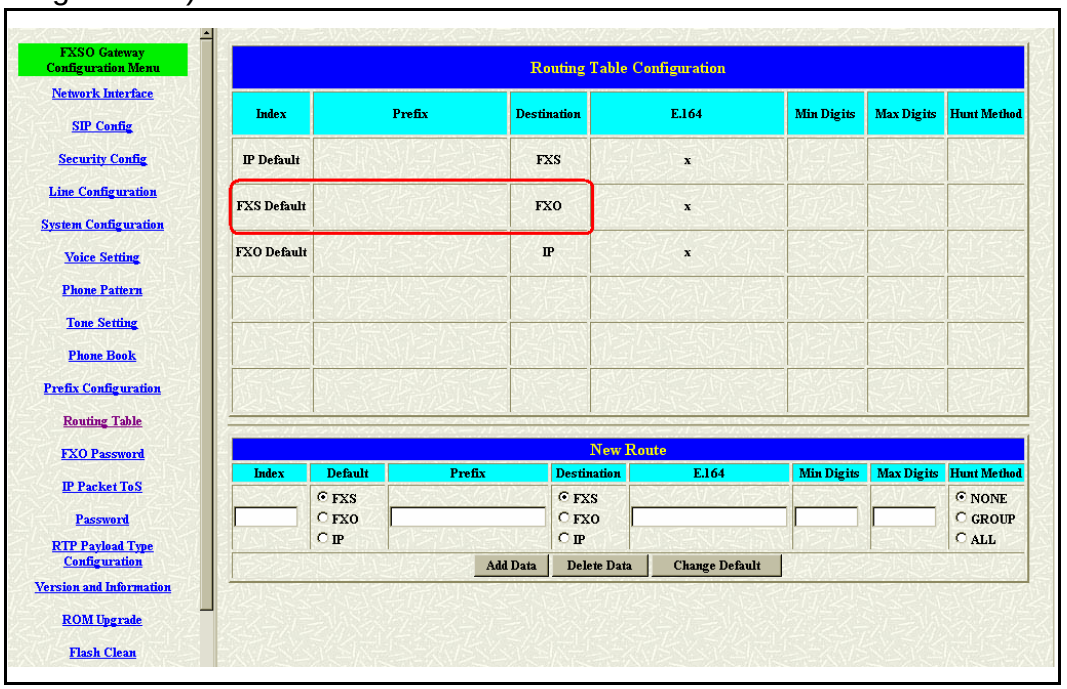

Figure 3.15: The Default Setting Changed

3 Please Commit it and Reboot the system if the configuration is finished.

3.11.2 Add a new Routing Table

1 The default setting is changed after you press the Change Default button.

Please press the Routing Table button again to show the new setting. (see figure 3.16)

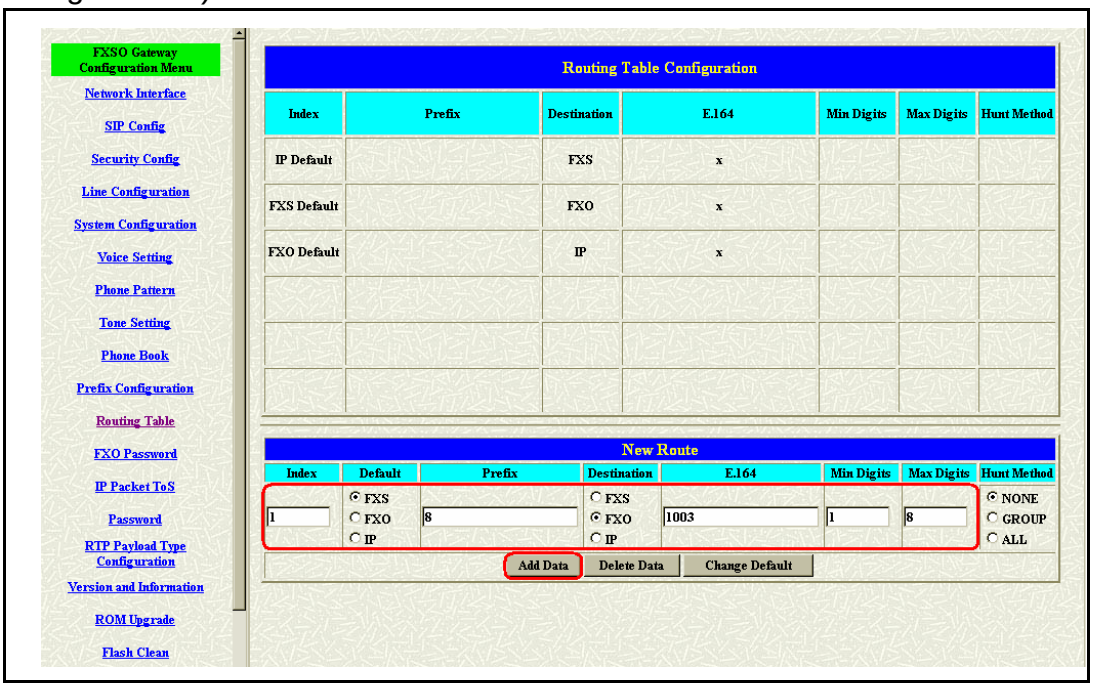

FIGURE 3.16: EDIT AND ADD A NEW ROUTING TABLE

2 Press Add Data button to save the configuration and press the Routing Table button again to reload the configuration. (see figure 3.13)

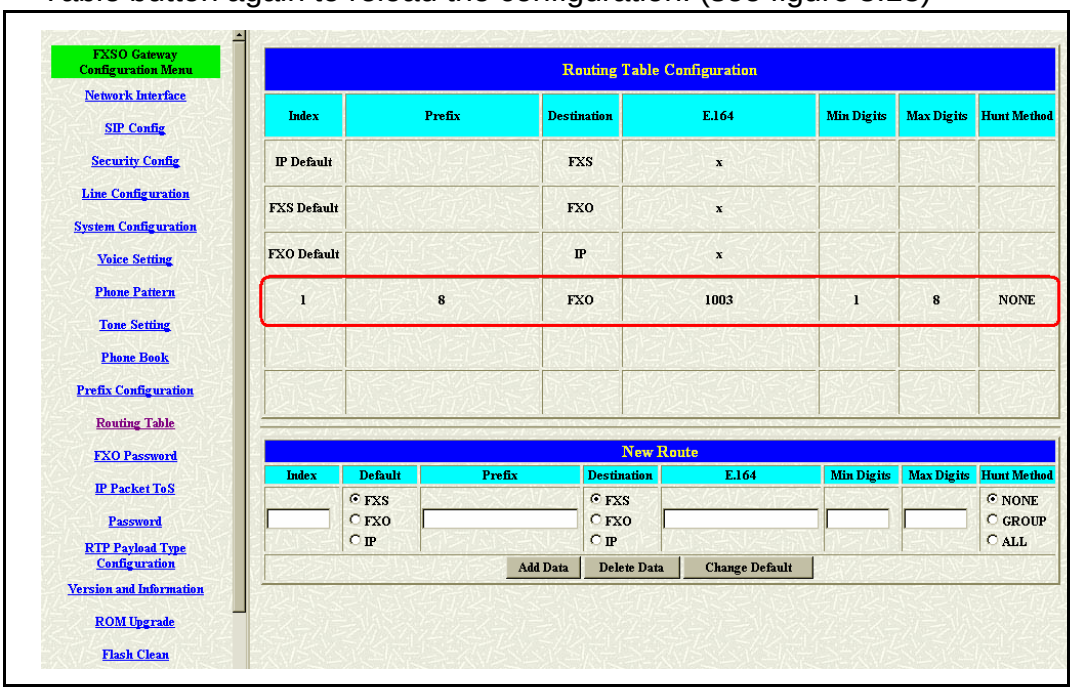

Figure 3.17: New Special Routing

The explanation of figure 3.17 is as below:

When the user dial 8 with the first digit of the numbers from FXS or IP side. And the numbers you dial is between 1 and 8 digits. If this number matches the rule, it will be transferred to the FXO port whose E164 number is 1003.

3 Please Commit it and Reboot the system if the configuration is finished.

3.12 FXO Password

You will get the IVR if you make calls from PSTN side. The IVR will ask you the password you set, and you could make other calls to IP side if the password you type is correct. Please press the FXO Password button to configure the password (see figure 3.18)

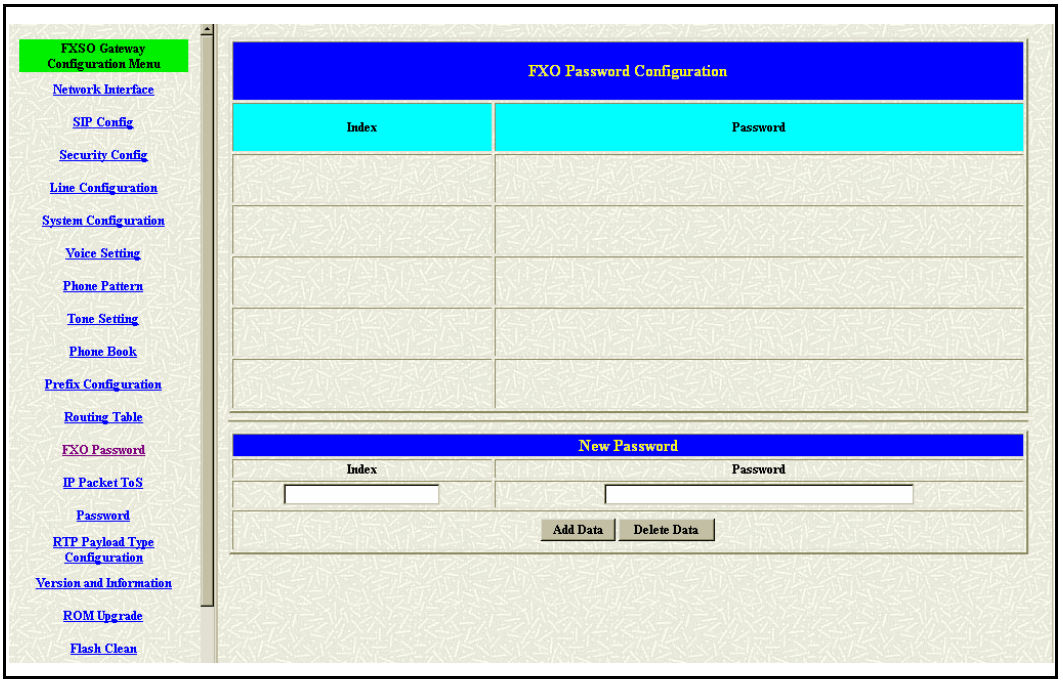

Figure 3.18: FXO Password

- Index – The number of this table.
- Password – The password you set.

This function is only for the calls from the PSTN side. It's not ready for the IP side as so far.

3.13 IP Packet ToS

The Type of Service should be worked with the network router. The router will check all the packets if it supports the TOS function. There is a field in the packet for the TOS value. This WEB is for users to configure these values to make the packets with the correct values for the TOS service from the gateway. (see figure 3.19)

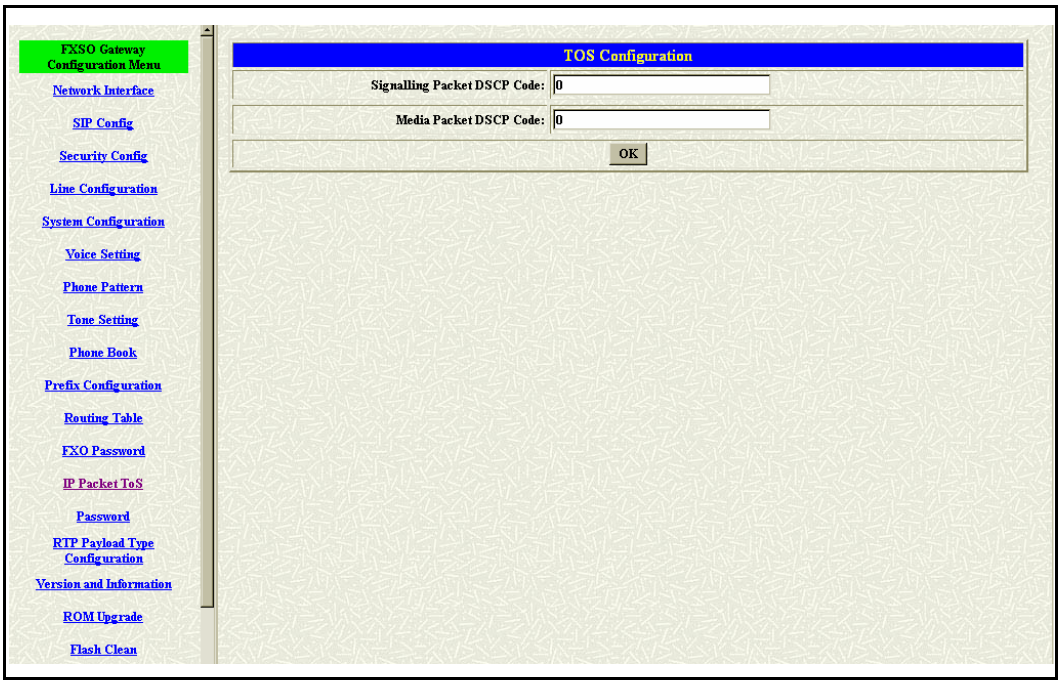

Figure 3.19: ToS

According to the RFC 1349 document, the ToS value as following:

1000 – minimize delay
0100 – maximize throughput
0010 – maximize reliability
0001 – minimize monetary cost
0000 – normal service

These values are the Binary format. Please change to the Decimal and put these values in to the correct table.

3.14 Password

There are two-login accounts in this unit. One is the account root another is administrator. The default setting for these two accounts are empty. Users could define the passwords for these two accounts. Please get more info from the following description. (see figure 3.20)

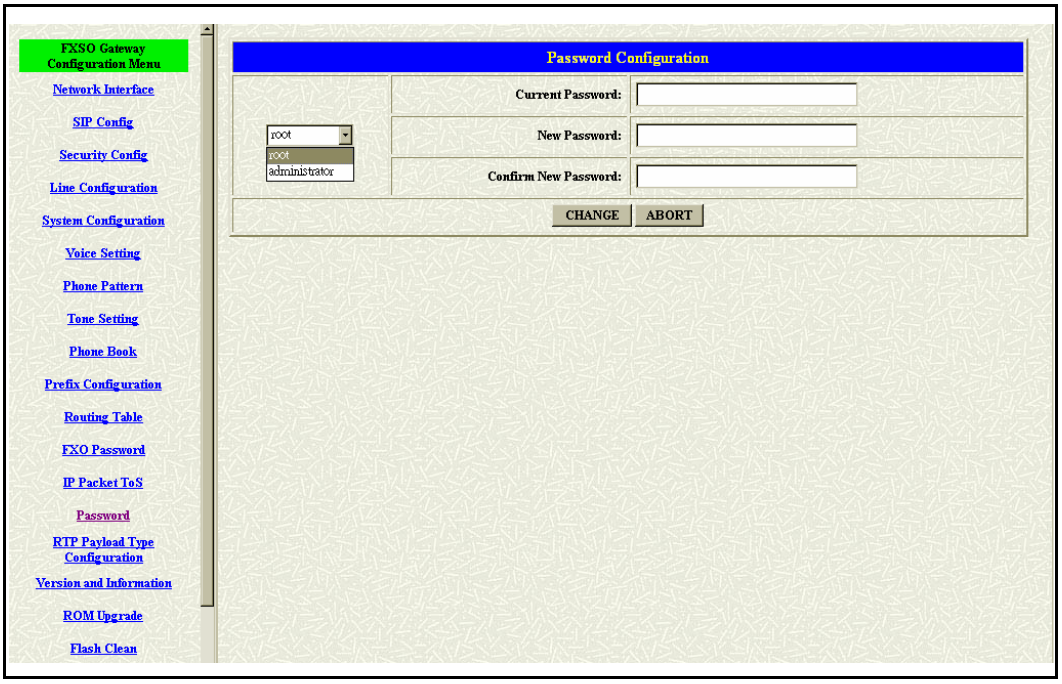

Figure 3.20: Password

- root – The password for the root account.
- administrator – The password for the administrator account. This account couldn't upgrade the 2M and boot rom file.
- Current Password – Enter the original password for the account.
- New Password – Enter the new password for the account.
- Confirm New Password – Enter the new password again.
- Change – This button will make the configurations saved and next time login will need the new password.
- Abort – Abort the configuration of the password changing.

Please remember the password you configure for the account. It will be more difficult to access it if you forgot the password.

3.15 RTP Pay Load Type Configuration

There are more types for the RTP Payload. This web page could support users define the Payload Type for some special payload. (see figure 3.21)

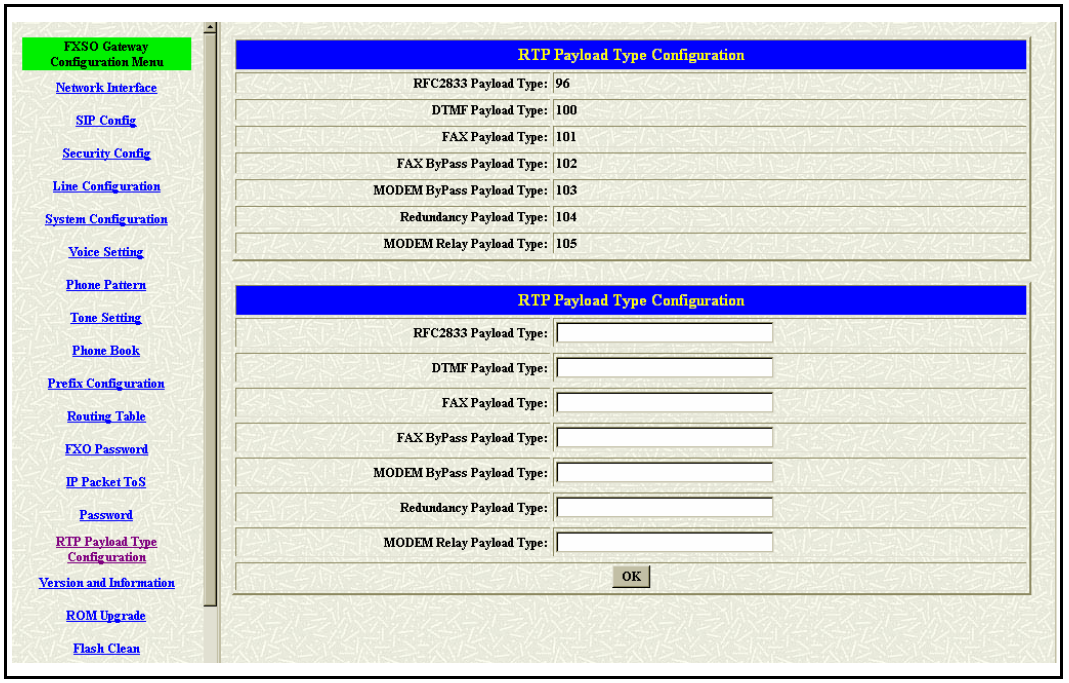

Figure 3.21: Pay Load Type Configuration

- RFC2833 Payload Type – To define the payload type for RFC2833 type.
- DTMF Payload Type – To define the payload for the DTMF type.
- FAX Payload Type – To define the payload for the FAX type.
- FAXByPass Payload type – To define the payload for the FAX by Pass type.
- MODEMByPass Payload Type –To define the payload for the Modem by Pass type. (This is no use for the hardware as so far.)
- Redundancy Payload Type – To define the payload for the Redundancy type.
- MODEMRelay Payload Type – To define the payload for the FAX by Pass type. (This is no use for the hardware as so far.)

The modem function couldn't be work in this kind of VoIP unit.

3.16 Version and Information

Users could get more detail about the software version for all the parts in this web page. (see figure 3.22)

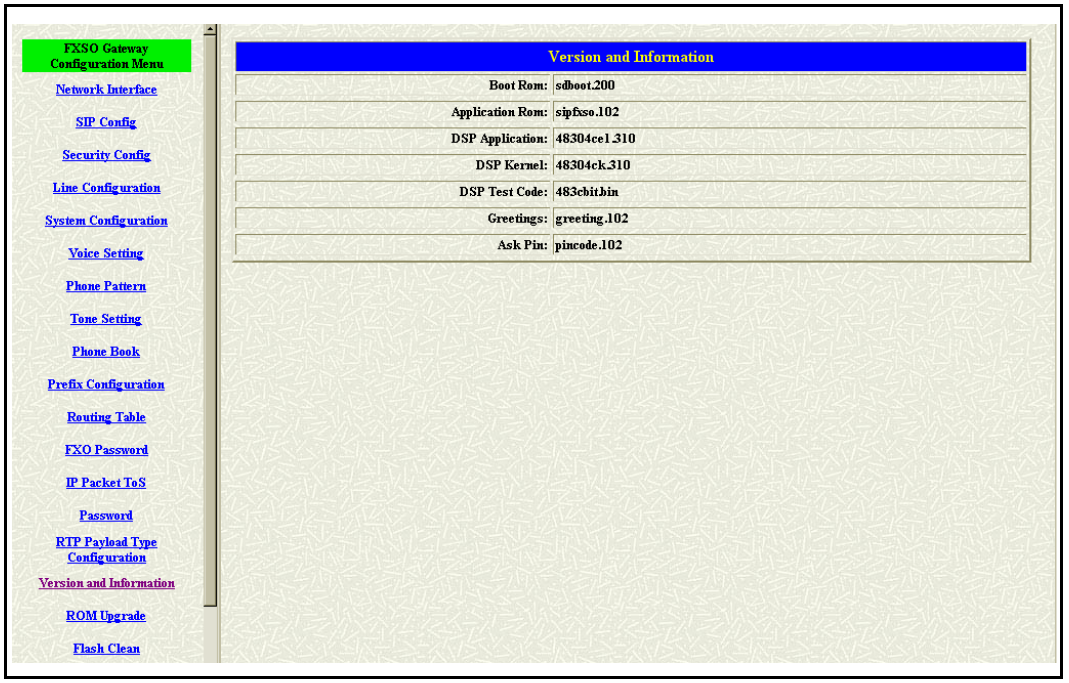

Figure 3.22 Version and Information

- Boot Rom – The version of the Boot Rom layer.
- Application Rom – The version of the Application Rom layer.
- DSP Application – The version of the DSP Application Rom layer.
- DSP Kernel – The version of the DSP Kernel layer.
- DSP Test Code – The version of the DSP Test Code layer.
- Greeting – The version of the Greeting file.
- ASK Pin – The version of the ASK Pin file.

3.17 ROM Upgrade

User could update the firmware just by the web configuration interface. There are two type for the upgrading procedure. One is using the TFTP server, another is using the FTP server. Please follow the step to update the gateway firmware version. (see figure 3.23)

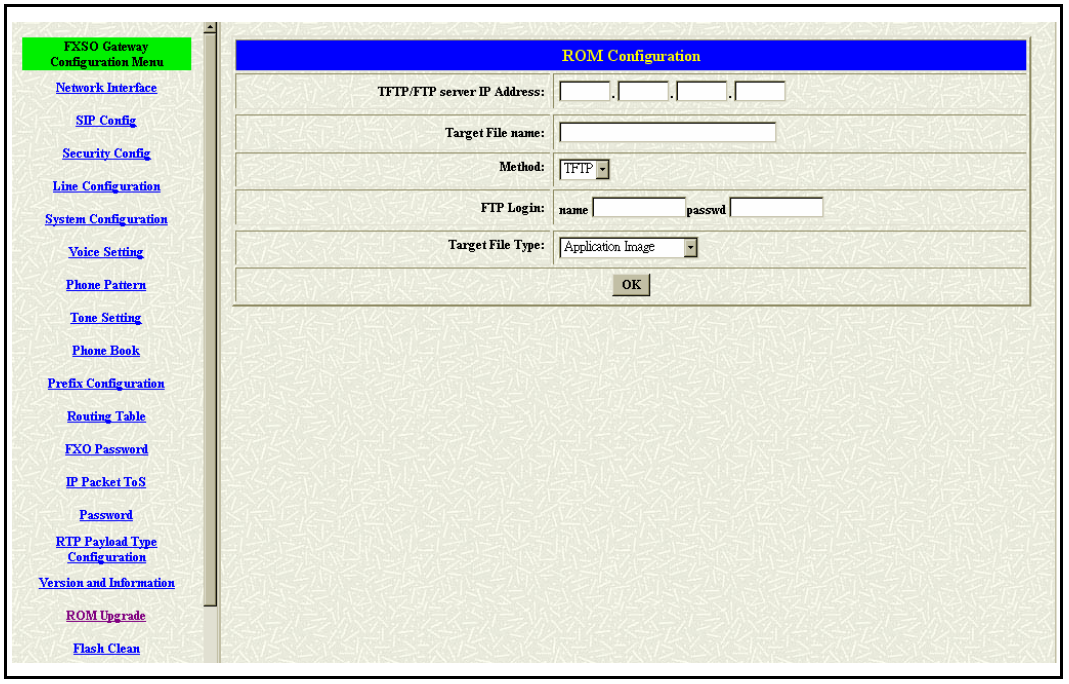

Figure 3.23 ROM Upgrade

- TFTP/FTP server IP Address – Put the ip address of the TFTP or FTP server in this table.
- Target File name – Put the target file name in this table.
- Method – There are two upgrade methods for the upgrade procedure. One is TFTP and another is FTP. Please change to correct method for the upgrading.
- FTP Login – Please enter the login name and password for the FTP upgrade method. This is necessary if user change the method to the FTP.
- Target File Type – Please pick up the correct file type for upgrading. If the file name and the file type is unconformable, the upgrade procedure will be failed.
- OK – Press the OK button if all the info above are correct. The unit will start to download the firmware file from the TFTP or FTP and write to the flash after the downloading.

【Updating the firmware by the FTP server】

1 Pick up the “Rom Upgrade” button to enter the upgrading web page and switch to the FTP method. (see figure 3.24)

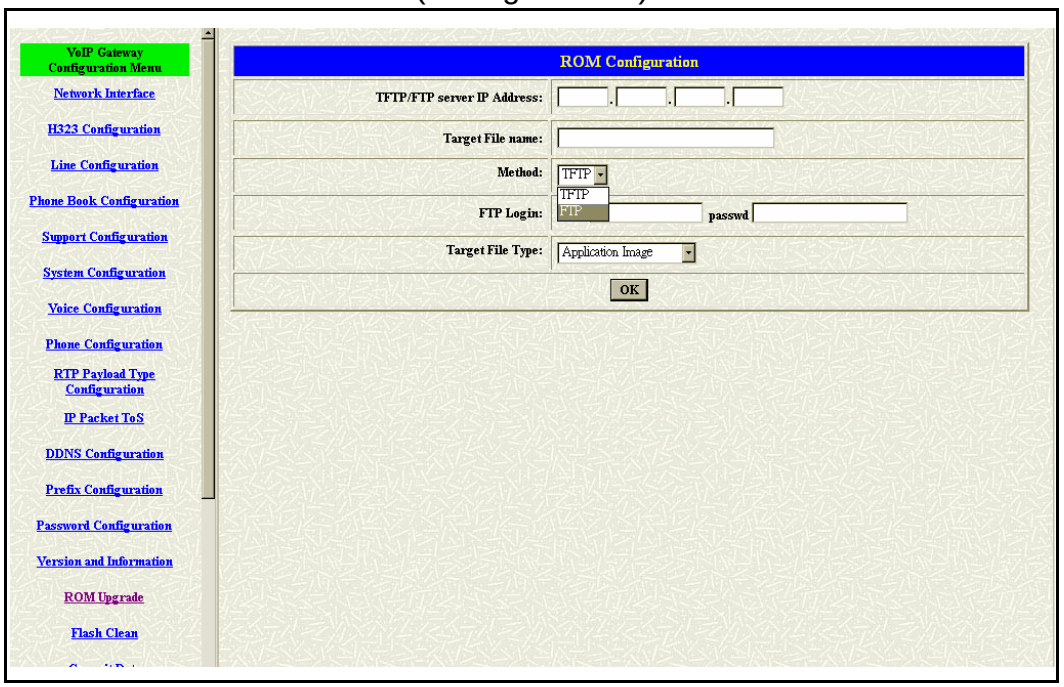

Figure 3.24: ROM Upgrade for FTP

2 Key in the IP address, the login name, password of your FTP server and the correct file name, file type. (see figure 3.25)

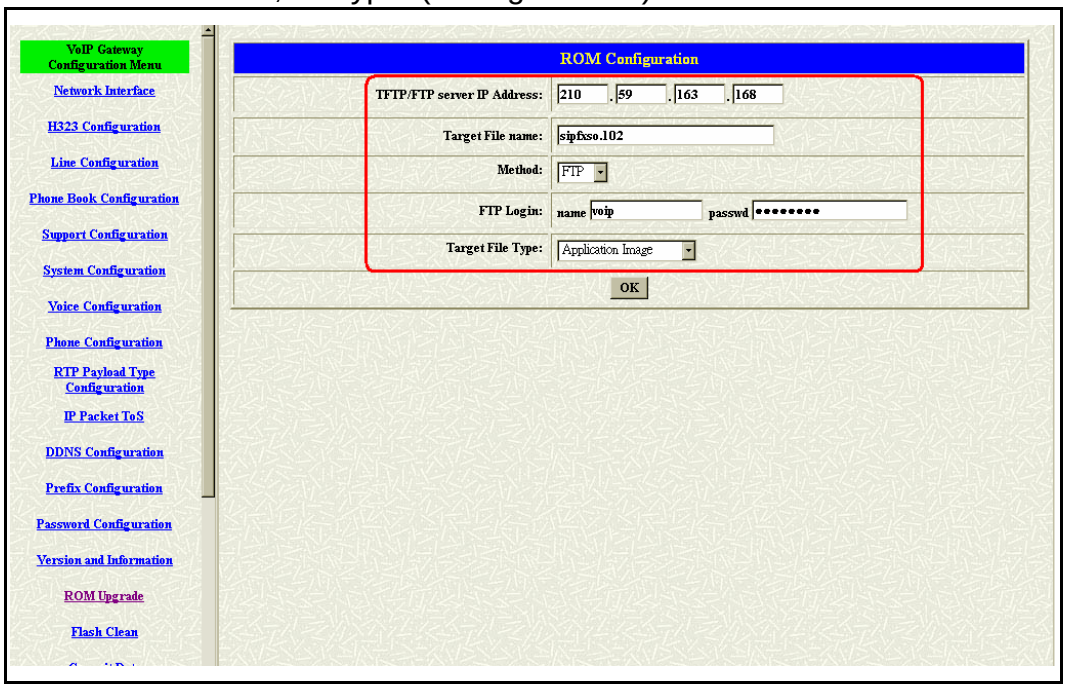

Figure 3.25: FTP information

Please pay more attentions about the red blank. The Target File Type has to be matched with the Target File name. Please put the correct info about the Target file in this table.

3 Press the OK button to execute the upgrade procedure.

4 Please press the "Reboot System" button to make it reboot.

【Updating the firmware by the TFTP server】

1 Downloading the TFTP program from our web site and install it first. Executing the TFTP program before you want to use the TFTP upgrade method.

2 Pick up the "Rom Upgrade" button to enter the upgrading web page and switch to the TFTP method. (see figure 3.26)

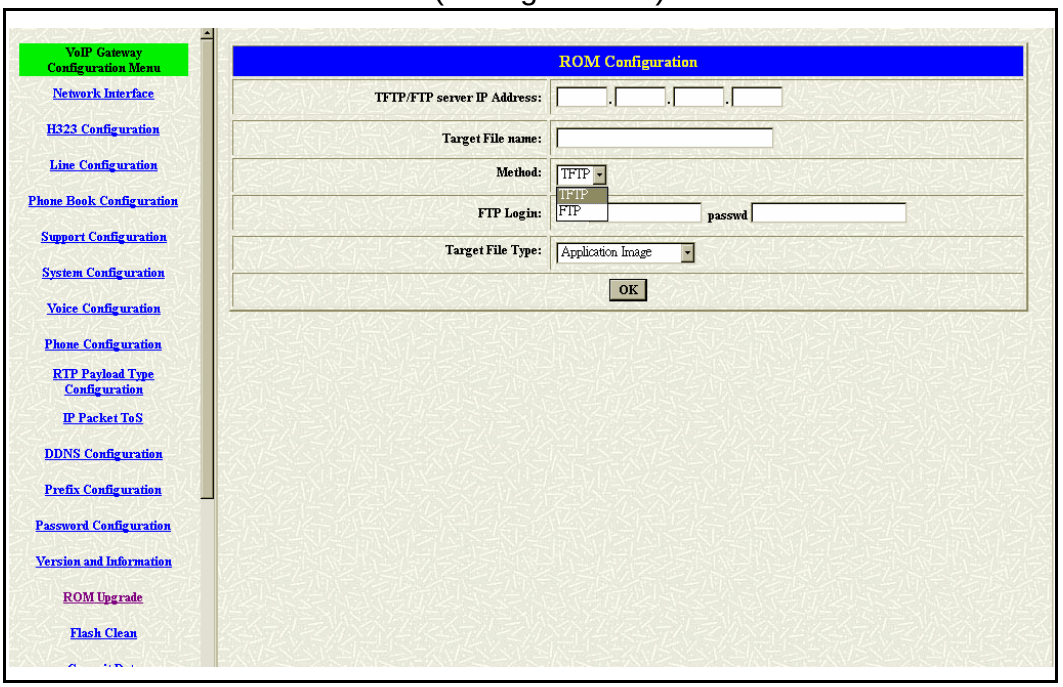

Figure 3.26: ROM Upgrade for TFTP

3 Key in the IP address of your TFTP server, pick up the file type for your upgrade file and the correct file name for upgrading. (see figure 3.27)

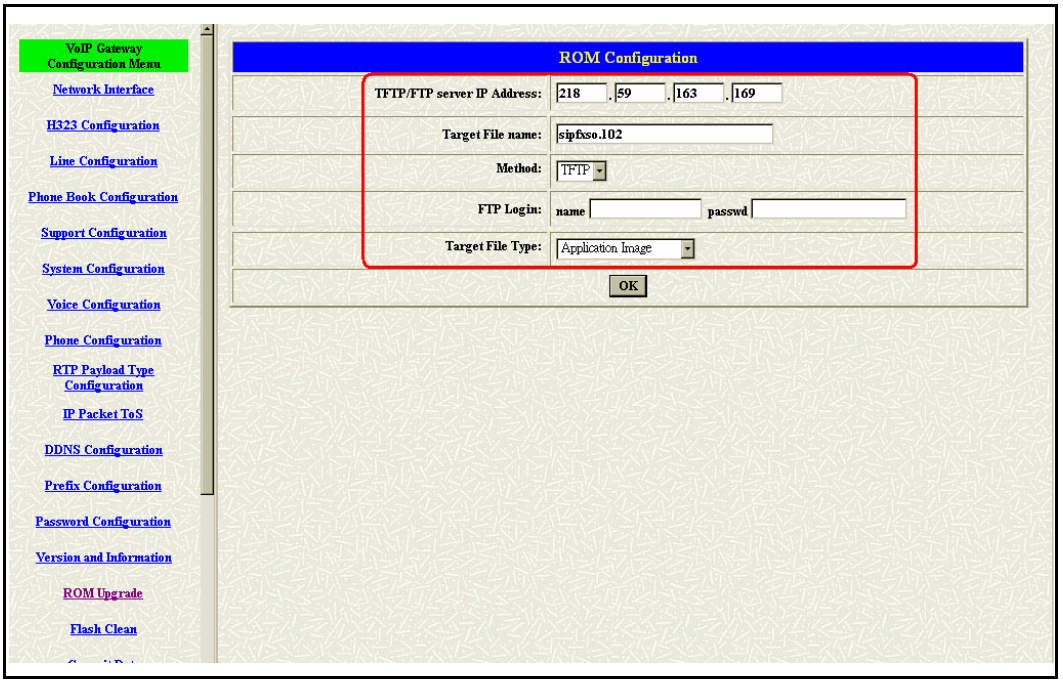

Figure 3.27: TFTP information

4 Press the OK button to execute the upgrade procedure.

Please pay more attentions on the file name you used. The file name with the prefix “2m” is the complete firmware, it will take more times for the downloading and upgrading. About the file name without the prefix “2m”, it’s only for the application layer firmware. In fact, the latest version firmware is only changed in the application layer.
Please use the flash clean web to make all the configuration back to the default setting if the upgrade procedure was finished.

5 Please press the “Flash Clean” button when the procedure is finished.

6 After pressing the “Flash Clean” button, please press the “Reboot System” button to make it reboot.

3.18 Flash Clean

Users could make all the configurations back to the default setting by this button. The password of the account and the networking configuration couldn't be back to the default setting by this command. (see figure 3.28)

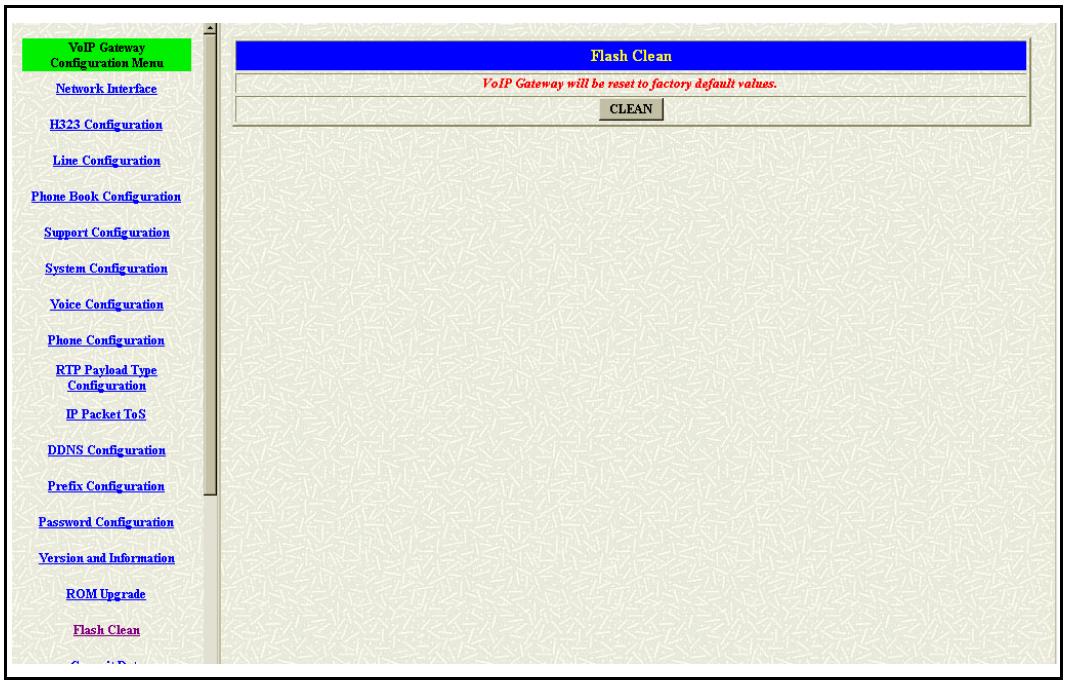

Figure 3.28: Flash Command

3.19 Commit

This web page could save the configurations if users change some configurations. This is necessary for users change the configurations. (see figure 3.29)

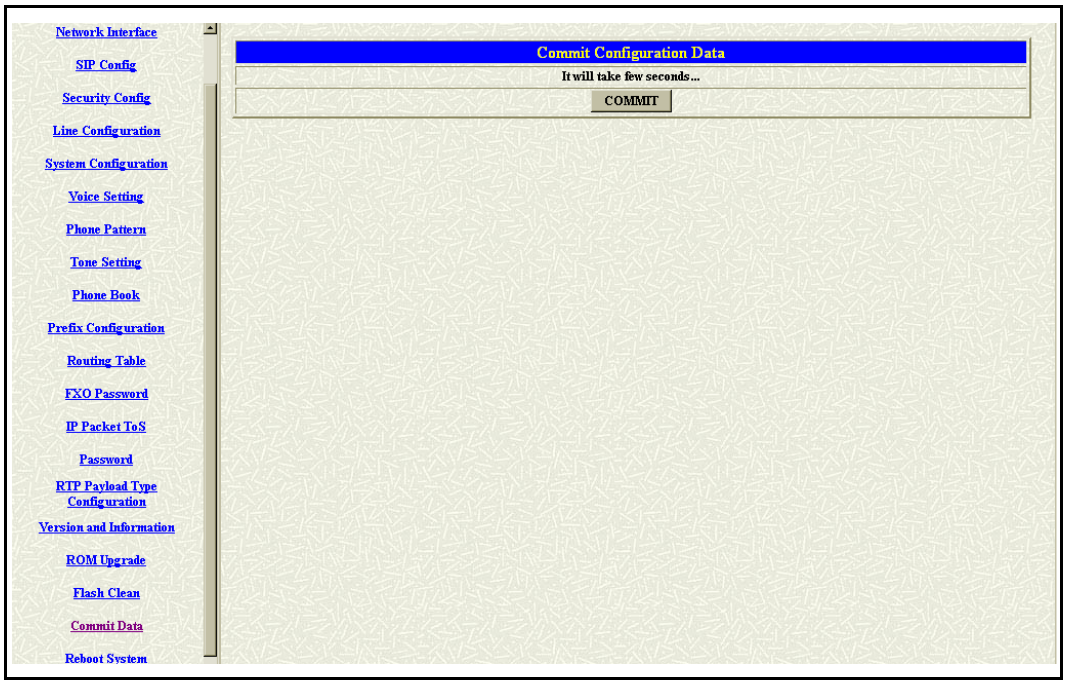

Figure 3.29: Commit the data

3.20 Reboot System

This web page will restart the whole system. This is the necessary step for the changing the configurations and makes it executed. (see figure 3.30)

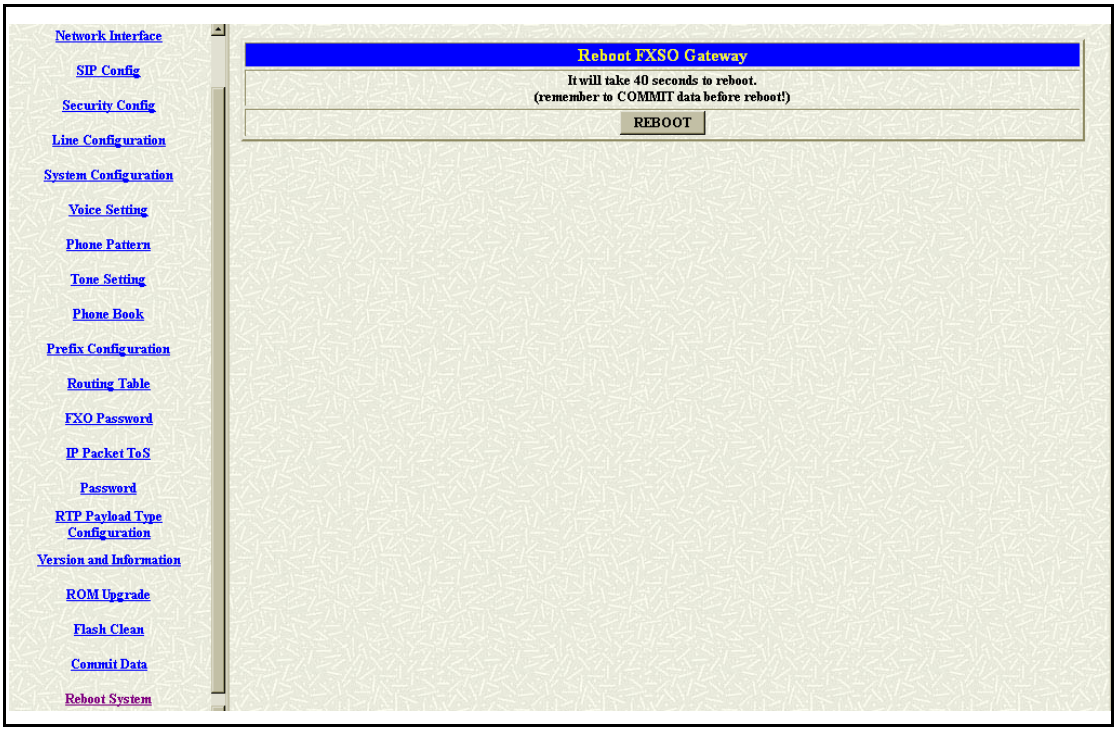

Figure 3.30: Reboot System

4. Command List

4.1 Hyper Terminal Setting

A terminal emulator is needed when using RS-232 port to configure Gateway. There are kinds of terminal emulator software. Here, we use Microsoft HyperTerminal to depict how to set up terminal emulator:

1. Execute the *Hyper Terminal* program, and then the following windows will pop-up on the screen. (START – Program files – Accessories – Communication – Hyper Terminal)

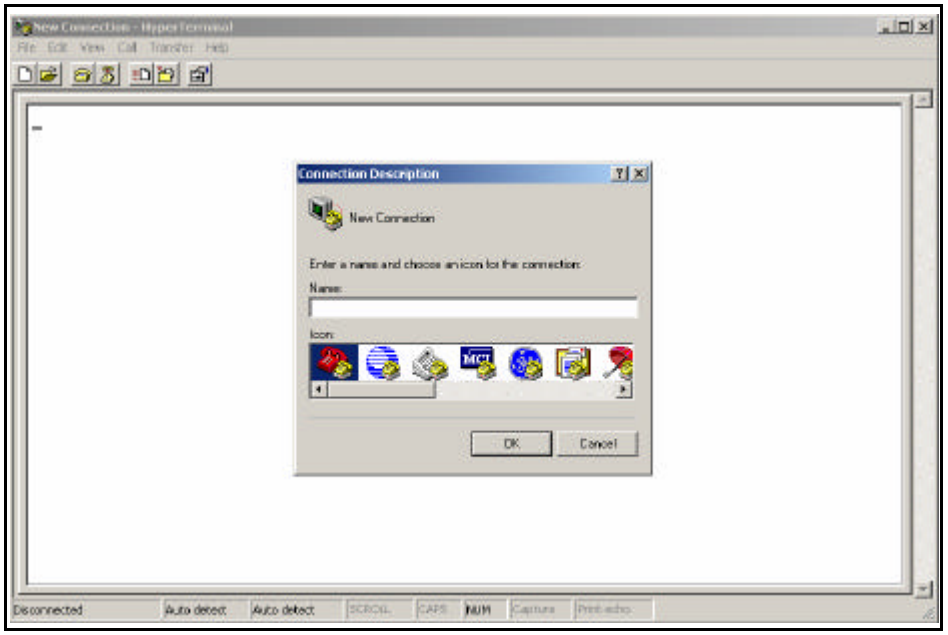

Figure 4.1: Hyper Terminal

2. Define a name such as ‘wg37’ for this new connection.

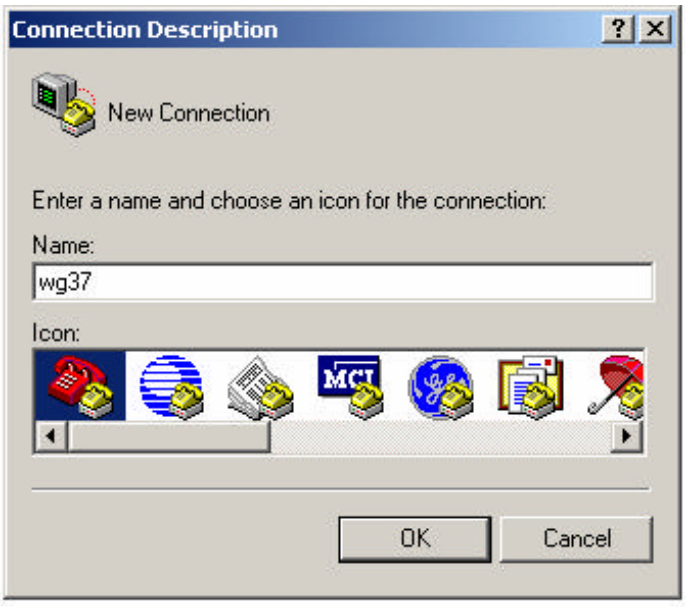

Figure 4.2: Edit the name of the connection

3. After pressing OK button, the next window appear, and then choose ***COM1/2 Port***, which you are going to use.

Figure 4.3: Pick up the right interface to use

4. Configure the COM Port Properties as following:
   - Bits per second: 9600
   - Flow control: None

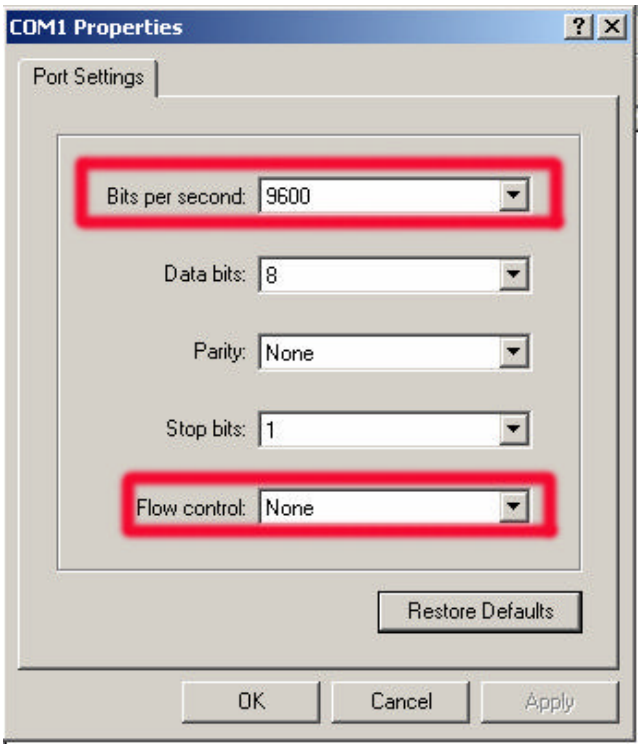

Figure 4.4: Configure the right Bps and control

5. Press ‘OK’ button, and then start to configure Gateway.

4.2 Command List

4.2.1 [help]

Type **help** or **man** or **?** to list all the available command.

usr/config$ help

help	*help/man/? [command]*
quit	*quit/exit/close*
debug	*show debug message*
reboot	*reboot local machine*
flash	*clean configuration from flash rom*
commit	*commit flash rom data*
ifaddr	*Internet address manipulation*
time	*show current time*
ping	*test that a remote host is reachable*
sysconf	*System information manipulation*
sip	*SIP information manipulation*
security	*Security information manipulation*
line	*Line information manipulation*
route	*Routing information manipulation*
prefix	*Prefix drop/insert information manipulation*
pbook	*Phone book information manipulation*
voice	*Voice information manipulation*
phone	*Setup of call progress tones and ringing*
tone	*Setup of disconnect tone*
fxopwd	*Setup of FXO password*
record	*Record voice for greeting and ask pin code*
tos	*IP Packet ToS (Type of Service)values*
pt	*DSP payload type configuration and information*
rom	*ROM file update*
passwd	*Password setting information and configuration*

usage: help [command]

4.2.2 [quit]

Type **quit** will quit the Gateway configuration mode and turn back to login prompt (in console mode) or disconnect (in TELNET mode).

```
usr/config$ quit
Disconnecting...
login:
```

Note: It is recommended that type the "**quit**" command before you leave the console. If so, Gateway will ask password again when next user connects to console port.

4.2.3 [debug]

Open debug message will show up specific information while Gateway is in operation. After executing the debug command, it should execute command **debug -open** as well. One example is demonstrated below.

```
usr/config$ debug -add fsm vp
usr/config$ debug -open
```

In this example, user open debug flags including fsm, vp.

Parameters Usage:

-status	Display the enabled debug flags.
-add	Add debug flag.
	-- fsm: sip related information
	-- vp : voice related information
-delete	Remove specified debug flag.
-open	Start to show debug messages.
-close	Stop showing debug messages.

4.2.4 [reboot]

After **commit** command, type **reboot** to reload Gateway in new configuration. The procedure is as below:

```
usr/config$ reboot

.Attached TCP/IP interface to cpm unit 0
Attaching interface lo0...done

Hardware auto detect...
Hardware Type : 1FXS + 1FXO
```

HTTPD initialized...

VoicePacketizermain comming
WorkMode : PROXY_MODE
incoming InitCallArray....REAL_MAXCALL=4
SIP stack was constructed successfully. Version - 2.2.1.8
Start registering to Proxy server

AC4804[0] is ok
successful 1 4
Initialize OSS libraries...OK!
VP v1.44 stack open sucessfully.

login:

4.2.5 [flash]

This command will clean the configuration stored in the flash ROM and reboot Gateway in factory default setting.

Parameter Usage:

-clean clean all the user defined values, and reboot Gateway in factory default mode.

Note: It is recommended that use "flash –clean" after application firmware id upgraded.

Warning: Only user who login with **root** can execute this command. Configurations of IP address and accounts' passwords will be kept.

4.2.6 [commit]

Save changes after configuring Gateway.

---

usr/config$ commit

This may take a few seconds, please wait....
Commit to flash memory ok!
usr/config$

---

*Note: Users shall use **commit** to save modified value, or they will not be*

activated after system reboot.

4.2.7 [ifaddr]

Configure and display Gateway network information.

usr/config$ ifaddr

LAN information and configuration
Usage:
ifaddr [-print]\[-dhcp used]\[-sntp mode [server][-cmcenter ipaddress]]
ifaddr [-ip ipaddress] [-mask subnetmask] [-gate defaultgateway]

-print Display LAN information and configuration.
-ip Specify ip address.
-mask Set Internet subnet mask.
-gate Specify default gateway ip address
-mode Set ip client service(0=FIX IP, 1=DHCP, 2=Pppoe).
-sntp Set SNTP server mode and specify IP address.
-dns specify IP address of DNS Server.
-timezone Set local timezone.
-id Connection user name for pppoe.
-pwd Connection password for pppoe.
-http Http port.

Note:
SNTP mode (0=no update, 1=specify server IP, 2=broadcast mode).
Example:
ifaddr -ip 210.59.163.202 -mask 255.255.255.0 -gate 210.59.163.254
ifaddr -mode 1
ifaddr -sntp 1 210.59.163.254
ifaddr -dns 1 168.95.1.1

usr/config$

Parameters Usage:

-print	print out current [ifaddr] settings and status
-ip	assign IP address for Gateway

-mask	assign internet subnet mask
-gate	assign IP default gateway
-mode	Switch the network type (0 = Static IP; 1 = DHCP mode 2 = PPPoE mode)
-sntp	Simple Network Time Protocol (1 = ON; 0 = OFF) When SNTP function is activated, users have to specify a SNTP server as network time source. An example is demonstrated below:
-dns	configure the IP address for the DNS server
-timezone	set local time zone according to GMT

---

usr/config$ ifaddr -sntp 1 10.1.1.1

10.1.1.1 stands for SNTP server's IP address.

-id	To configure the pppoe connection account for the pppoe connection.
-pwd	To configure the pppoe connection password for the pppoe connection.
-http	Change the http port. User can change default HTTP port (80) to another one for security or NAT application.

4.2.8 [time]

When SNTP function of Gateway is enabled and SNTP server can be found as well, type **time** command to show current network time.

---

usr/config$ time
Current time is THU JAN 01 05:29:23 1970

4.2.9 [ping]

Use **ping** to test whether a specific IP is reachable or not.
For example: if 192.168.1.2 is not existing while 192.168.1.254 exists.
Users will have the following results:

```
usr/config$ ping 192.168.1.2
no answer from 192.168.1.2
usr/config$ ping 192.168.1.254

PING 192.168.1.254: 56 data bytes
64 bytes from 192.168.1.254: icmp_seq=0. time=5. ms
64 bytes from 192.168.1.254: icmp_seq=1. time=0. ms
64 bytes from 192.168.1.254: icmp_seq=2. time=0. ms
64 bytes from 192.168.1.254: icmp_seq=3. time=0. ms
----192.168.1.254 PING Statistics----
4 packets transmitted, 4 packets received, 0% packet loss
round-trip (ms)  min/avg/max = 0/1/5
usr/config$
```

4.2.10 [sysconf]

This command displays system information and configurations.

```
usr/config$ sysconf

System information and configuration
Usage:
 sysconf [-idtime digit][-keypad dtmf][-prefixsw digit]
         [-prefixdisab digit][-usrdefprefix digits]
         [-codec digit][-localrbt digit][-forwardtime digit]
         [-hwtype digit][-gwprefix digit][-ring on_time off_time]
         [-fxotype digit]
 sysconf -print

 -print          Display system overall information and configuration.
 -idtime         Inter-Digits time.(1~10 sec)
 -forwardtime    Forward time for FXS line if no answer.(5~65535 sec)
 -keypad         Select DTMF type: 0=In-band,
                                   1=RFC2833.
 -hwtype         Hardware type.(Auto:0 / 1FXS+1FXO:1 /
```

2FXS+2FXO:2)
-callerid CallerId Type .(Caller type, 0: none, 1: FSK)
-ring The ring time for ring detection.(Uint:ms)
-rba The number of ring times before answer.(1~5)
-eod End of dial.(Enable: 1 / Disable : 0)
-connect Auto connect time.(0=Disable, for 1~65535 sec)

Example: sysconf -ring 500
usr/config$

Parameters Usage:

-print print out all current settings

-idtime set the duration(in second) of two pressed digits in dial mode as timed out. If after the duration user hasn't pressed next number, it will dial out all number pressed. (1-10 seconds)

-forwardtime set forward time(5-65535 seconds)for FXS Line. If called party hasn't answered the call in this time, call will be forward to assigned number in [line] command. (please refer to ***[line]*** command for forward setting)

-keypad DTMF replay type. When value is "0", Gateway will transfer DTMF signal via In-Band type, "1" via RFC2833 type. Users can adjust the value according to various applications.

1. *number (instead of Line number of FXO Line)+ PSTN number to make a call to PSTN side connected with FXO Line.*
2. *After gateway-prefix-drop function is enabled, user must remember to re-configure line number of FXS Line, because line number of FXS Line must remove prefix number. For example, origin line number of FXS line is 1001, prefix is 100, since prefix number will be drop, once gateway has incoming call 1001, after drop gateway prefix 100, it will search line number "1". So line number must be set as "1".*

-hwtype application rom file of 37 series are the same no matter how many ports is the module, so after user downloads the application rom file, user can select which hardware type is . "0" means gateway will automatically detect the hardware

type, “1” means the hardware type is 1FXS+1FXO, “2” means the hardware type is 2FXS+2FXO.

Note:

The default value is to auto detect hardware type. Usually it is not necessary to change this setting. Please make sure about your Hardware Type, Gateway may be not functional if set wrong hardware type.

-callerid Caller ID function disables or enable. The caller ID will be disable if user out the value 0 in this configuration or users could put the value 1 to enable the FSK caller ID function. Please check out the phone set could support the FSK caller ID display. (0 for disable ; 1 for FSK type.)

-ring ring time for ring detection(in ms). When Gateway has incoming call from PSTN side to FXO port, Gateway will determine it is a ring but not noise only if it is longer than this ring time.

Note:

In Taiwan the ring time of PSTN usually is 1000ms, so if user set ring time longer that 1000ms, FXO port may not be able to pick up the call from PSTN side.

-rba When the calls from the PSTN side, FXO port will off hook if the ring time is matched with this number.

-eod It will transfer the DTMF in “#” if users disable the end of dial function. Users have to press the key pad in “#” if the end of dial function is enable.

-connect The unit will send the connect message to the IP side automatically. This function just supports the one-stage-dialing function.

4.2.11 [sip]

This command is for sip configuration related parameters.

---

usr/config$ sip
sip stack information and configuration
Usage:
-print Display SIP stack information and configuration.
-mode Configure as Proxy mode or Peer-to-Peer mode.

-px Proxy server address. (Proxy IPv4 address or Proxy dns name)
-pxport Proxy server port. (the port of proxy)
-outpx OutBoiund Proxy server address. (IPV4 address or dns name)
-prefix Specify prefix string, use it when the UserID contains alphabets
-line1 Line 1(TEL 1) SIP number.
-line2 Line 2(LINE 1) SIP number.
-line3 Line 3(TEL 2) SIP number.
-line4 Line 4(LINE 2) SIP number.
-expire The relative time after which the message expires (0~65535).
-port SIP local UDP port number (5060~5070). Default : 5060
-rtp RTP port number (2326~65532). Default : 16384

Example:

sip -px 210.59.163.171 -line1 70 -line2 71 -line3 72 -line4 73

usr/config$

Parameters Usage:

-print print current h323 related settings
-mode alternatives for proxy or peer-to-peer mode (1=proxy mode; 0=peer-to-peer mode). If users select proxy mode, a valid proxy is needed when Gateway is in operation.

---

usr/config$ sip –mode 0 (peer to peer mode)

-px to assign the ip address of the proxy when Gateway is in proxy mode.
-pxport define the proxy port for the registration or call.
-prefix this will be prefix the alphabets before the sip line number.
-line1 assign FXS TEL1 number.
-line2 assign FXO Line1 number.
-line3 assign FXS TEL2 number.
-line4 assign FXO Line2 number.

Note:

User can also set "x" in line number to disable the port. If the port is disabled, it can only receive calls but not calling out.

Note:

1. This is for 3702, for 3701 model, there are only line1 and line2 command.
2. No matter in Proxy or P2P mode, user only needs to dial line number to reach local port. For example, in P2P mode, user wants to dial from FXS TEL1 to FXO Line1, only need to dial number of line2.

-expire	It just like the TTL function in H323, the gateway will make sure the registration is success or not for a period times.
-port	define the local sip port for this gateway.
-rtp	to allocate RTP port range—NOT RECOMMENDED. This may be used when RTP port range conflicts with Firewall policy. (each port of Gateway use 2 RTP ports)

4.2.12 [security]

This is the authentication for the SIP account.

---

usr/config$ security

Secuirty information and configuration
Usage:
security [-name username] [-password password]
security -print

-print Display system account information and configuration.
-line Specify which line number you want to set the account.
-name Specify user name.
-password Specify password.
Example:
security -line 1 -name kkk -password 12345

Parameter Usages:

-print	print out all current settings of security.

-line the line number, which you want to define the security info
-name the name is as same as the SIP number.
-password the password for the authentication if it is the necessary for the proxy.

4.2.13 [line]

This command is for configure each line parameters of Gateway.

---

usr/config$ line

Gateway line information and configuration
Usage:
line -config number [hunt number][hotline number][forward number]
line -print Gateway line information.
hunt Hunting group.
hotline Hot line configuration.
fwdtype forward type for FXS line.
To IP:
0:disable
1:un condition
2:busy
3:no answer:
To Local:
0:disable
3:no answer
forward forward for FXS line.
Example:
line -config 1 hunt 1 hotline 1003 forward 1002

usr/config$

Parameter Usages:
-print print out all current settings of line
-config determine which line to configure
-hunt set hunting group flag of each line. User can assign different hunt group number represent different hunt group. For example, if user assigns FXS TEL1 as hunt group 1, and FXS

TEL2 as hunt group 2, they will be determined as 2 different groups. On the other hand, if user assigns FXS TEL1 as hunt group 1, and FXS TEL2 as hunt group 1 too, when having incoming call to FXS TEL1, which is busy, this call will be route to FXS Line2.

Note: *FXO Lines and FXS TELs are treated as 2 different groups, so even they are in the same hunt group, call will only be routed to the same FXS or FXO Lines.*

-hotline set hotline table. The Hotline Mode is applied in limited two channels. User just picks up the phone set of one FXS TEL or calls in one FXO line, and gateway will automatically dial out a phone number. In the other hand, user will hear ring back tone or dial tone immediately depended on configurations of destination device.

Note: This function can both work in Proxy or P2P mode.

(1) Call out from FXS Line

Proxy Mode Usage:

Set gateway under proxy mode.

Create a Hotline table with "***line*** " command.

---

usr/config$ line –config 1(3) hotline 1001

In this example means: if user picks up phone set of FXS Line1, gateway will automatically dial out "1001".

P2P Mode Usage:

Set gateway under P2P mode.

Create phone book table with "***pbook*** " command.

Create a Hotline table with "***line*** " command.

---

usr/config$ pbook –add name sipfxso ip 10.1.1.1 e164 1001
usr/config$ line –config 1(3) hotline 1001

In this example means: if user picks up phone set of FXS Line1, gateway will automatically dial out IP address of "1001".

(2) Call out from FXO Line

Proxy Mode Usage:

Set gateway under proxy mode.

Create a Hotline table with "***line*** " command.

---

usr/config$ line –config 2(4) hotline 1001

In this example means: if user calls in FXO Line1, gateway will automatically dial out "1001".

P2P Mode Usage:

Set gateway under P2P mode.

Create phone book table with "***pbook*** " command.

Create a Hotline table with "***line*** " command.

---

usr/config$ pbook –add name sipfxso ip 10.1.1.1 e164 1001
usr/config$ line –config 2(4) hotline 1001

In this example means: if user calls in FXO Line1, gateway will automatically dial out IP address of "1001".

-fwdtype This version could support all the forward function, including the unconditional, busy and no answer forward function. All the forward function will make all the incoming calls routed to other number which users define in the forward table. The busy won't be worked if the hunt group function had been enabled. The no answer forward function could support the IP and local forward at the same time. Please define the special route table for the local no answer forward function. The forward could support the FXS port only.

-forward Users could define the forward number for the forward function.

---

usr/config$ line –config 1 forward 1002

In this example means: if user define the forward type for this line, the call will be forward to the destination of this phone number.

4.2.14 [route]

This command is to set routing table for Gateway.

```
usr/config$ route
Routing table information and configuration
Usage:
route -add [prefix number][dst number][e164 number]
      [min number][max number][hunt number]
route -delete index
route -modify index [prefix number][dst number][e164 number]
      [min number][max number][hunt number]
route -ip   [dst number][SIP number]
route -fxs [dst number][SIP number]
route -fxo [dst number][SIP number]
route -print   Routing table information.
       prefix      The prefix of dialed number.
       dst         Destination port(FXS:0/FXO:1/IP:2).
       e164        Destination e164 number(when destination is FXS or
                   FXO).
       min         Min digits.(0 ~ 255)
       max         Max digits.(0 ~ 255)
       hunt        Hunt method for busy forward(NONE:0 / GROUP:1 /
                   ALL:2)
Example:
      route -add prefix 100 dst 0 e164 1001 min 1 max 3 hunt 1
      route -ip dst 0 e164 1001
      route -fxs dst 2
      route -fxo dst 2 e164 x
      route -modify 1 prefix 100 dst 0 e164 1001 min 1 max 3 hunt 1
      route -delete 1
usr/config$
```

Parameter Usages:

-print print out all routing table information

-add	add a routing rule in routing table. User can add less than 50 rules. (***route –add prefix "prefix number" dst "destination port type" e164 "SIP number of port" min "minimum digits needed" max "maximum digits can't be exceeded"***)
-delete	delete a routing rule in routing table (***route –delete "index of routing rule"***)
-modify	modify a routing rule in routing table. (***route –modify "index of routing rule" prefix "prefix number" dst "destination port type" e164 "SIP number of port" min "minimum digits needed" max "maximum digits can't be exceeded"***)
-ip	create routing table for incoming call from IP side. (***route –ip dst "destination port type" e164 "SIP number of port"***)
-fxs	create routing table for incoming call from FXS TELs. (***route –fxs dst "destination port type" e164 "SIP number of port"***)
-fxo	create routing table for incoming call from FXO Lines. (***route –fxo dst "destination port type" e164 "SIPnumber of port"***)
prefix	prefix of dialed number
dst	destination port, 0 means FXS TELs, 1 means FXO Lines, 2 means IP side, x means no determinate number.
e164	destination SIP number. This only need to be set when routed port is FXS TELs or FXO Lines to determine which port will this call be routed to.
min	minimum digits needed.
max	maximum digits needed.
hunt	set hunt method for busy forward. 0 means no hunting, 1 means hunting method follows the rule of ***[line]***, 2 means hunting method is to hunt between all ports in the same type, for example, destination port is FXS TEL will hunt in all FXS TELs, destination port is FXO Lines will hunt in all FXO Lines.

Usage Example:

1. ***route –add prefix 100 dst 0 e164 1001 min 1 max 3 hunt 1***

   This command means if gateway has incoming call's prefix number is

100, and total digits is between 1 to 3, this call will be routed to FXS TEL 1001, and if TEL 1001 is busy, call will be routed to another FXS TEL.

2. ***route –ip dst 1 e164 1002***
   This command means incoming call from IP side will be routed to FXO Line of number 1002.
3. ***route –fxs dst 1 e164 1002***
   This command means incoming call from FXS TELs will be routed to FXO Line of number 1002.
4. ***route –fxo dst 2***
   This command means incoming call from FXO Lines will be routed to IP side.

Note:

(1) When destination is IP side, SIP number doesn't need to determine. (Ex. route –fxs dst 2)

(2) If user doesn't want to determine a specific port to route, SIP number must set as "x". (Ex. route –ip dst 1 e164 x)

(3) Default value: Incoming call from FXS and FXO ports will be forward to IP side directly.

4.2.15 [prefix]

This command is for make rules for drop or inserts prefix digits.

---

usr/config$ prefix

Prefix drop/insert information and configuration
Usage:
prefix -add [prefix number][drop number][insert digits]
prefix -delete index
prefix -modify index [prefix number][drop number][insert number]
prefix -print Prefix drop/insert information.
prefix The prefix of dialed number.
drop Drop prefix(Enable:1/Disable:0).
insert Insert digits.
Example:
prefix -add prefix 100 drop 1 insert 2000

prefix -add prefix 100 drop 1
prefix -add prefix 100 drop 0 insert 200
prefix -delete 1
prefix -modify 1 prefix 100 drop 0 insert 300

usr/config$

Parameter Usages:

-add add a rule to drop or insert prefix digits of incoming call.(***prefix –add prefix "prefix number" drop 0/1 insert "insert number"***)

-delete delete a rule to drop or insert prefix digits of incoming call. (***prefix –delete prefix "prefix number"***)

-modify modify a rule to drop or insert prefix digits of incoming call. (***prefix –modify prefix "prefix number" drop 0/1 insert "insert number"***)

prefix set which prefix number to implement prefix rule.

drop enable or disable drop function.If this function is enabled, Gateway will drop prefix number on incoming call.

insert set which digit to insert on incoming call.

4.2.16 [pbook]

Phone Book function allows users to define their own numbers, which mapping to real IP address. It is effective only in peer-to-peer mode. When adding a record to Phone Book, users also have to reboot the machine, and the record will be effective immediately.

---

usr/config$ pbook

Phone book information and configuration
Usage:
pbook [-add [name string][e164 number][ip address]
[port number][drop digit][insert number]]
[-modify number [name string][e164 number][ip address]
[port number][drop digit][insert number]]
[-delete number]
pbook -print

-print Display phone book information and configuration.
-add Add new phone book record)
-delete Delete phone book record
-modify Modify phone book record.
name : 1 ~ 10 characters.
e164 : 1 ~ 10 digits.
ip : IP adress.
port : 1024 ~ 65535.
drop : 0:Disable/1:Enable.
insert : 1 ~ 10 digits.

Example:
pbook -add name test e164 1234 ip 192.168.1.10 drop 1 insert 5678
pbook -delete 1
pbook -modify 1 name test e164 5678 ip 192.168.1.10 drop 0

usr/config$

Parameter Usages:

-print — print out current contents of Phone Book. (***pbook -print***) Users can also add *index number*, from 1 to 100, to the parameter to show specific phone number. (Ex. ***pbook –print 1***)

Note: <index number> means the sequence number in phone book. If users do request a specific index number in phone book, Gateway will give each record a automatic sequence number as index.

-add — add a new record to phone book. When adding a record, users have to specify ***name***, ***ip***, and ***e164*** number to complete the command.

name — name to represent callee.
e164 — The SIP number for mapping with IP address of called
ip — ip address of called
port — user could define the sip port for the peer to peer mode calling mode
drop — drop e.164 number when dial out. 0 means to keep e.164

number, 1 means to drop e.164 number when dialing out.

insert — insert digits.(1~10 digits)

-delete — delete a specific record. "pbook –delete *3*" means delete **index 3** record.

-modify — modify an existing record. When using this command, users have to specify the record's index number, and then make the change.

PhoneBook Rules:

The SIP number defined in phone book will fully carry to destination. It is not just a representative number for destination's IP Address. In other words, user dial this number to reach the destination, destination will receive the number and find out if it is matched to itself, including Line number in some particular device.

4.2.17 [voice]

The voice command is associated with the audio setting information. There are four voice codecs supported by Gateway.

---

usr/config$ voice

Voice codec setting information and configuration
Usage:
voice [-send [G723 ms] [G711A ms] [G711U ms] [G729 ms] [G729A ms] [G729B ms] [G729AB ms]]
[-volume [voice level] [input level] [dtmf level]]
[-nscng [G711U used1] [G711A used2] [G723 used3]]
[-echo used] [-mindelay t1] [-maxdelay t2] [-optfactor f]
voice -print
voice -priority [G723] [G711A] [G711U] [G729] [G729A] [G729B] [G729AB]

-print Display voice codec information and configuration.
-send Specify sending packet size.
G.723 (30/60 ms)
G.711A (20/40/60 ms)
G.711U (20/40/60 ms)

G.729 (20/40/60 ms)
G.729A (20/40/60 ms)
G.729B (20/40/60 ms)
G.729AB (20/40/60 ms)

-priority Priority preference of installed codecs.
G.723
G.711A
G.711U
G.729
G.729A
G.729B
G.729AB

-volume Specify the following levels:
voice volume (0~63, default: 29,28),
input gain (0~63, default: 26),
dtmf volume (0~31, default: 23),

-nscng No sound compression and CNG. (G.723.1 only, On=1, Off=0).

-echo Setting of echo canceller. (On=1, Off=0, per port basis).

-mindelay Setting of jitter buffer min delay. (0~150, default: 90).

-maxdelay Setting of jitter buffer max delay. (0~150, default: 150).

Example:

voice -send g723 60 g711a 60 g711u 60 g729 60 g729a 60 g729b 60 g729ab 60

voice -volume voice 20 input 32 dtmf 27

voice -echo 1 1

usr/config$

Parameters Usage:

-print print current voice information and configurations.

-send define packet size for each codec. 20/40/60ms means to send a voice packet per 20/40/60 milliseconds. The smaller the packet size, the shorter the delay time. If network is in good condition, smaller sending packet size is recommended. In this parameter, 20/40/60ms is applicable to G.711u/a law, and G.729/G.729A/G.729B/G.729AB codec, while 30/60ms is applicable to G.723.1 codec.

-priority codec priority while negotiating with other h323 device. This parameter determines the listed sequence in h.245 TCS message. The codec listed in left side has the highest priority when both parties determining final codec. User can also select the particular codec without others.

---

usr/config$ voice –priority g723 (only select this codec)
usr/config$ voice –priority g723 g729 g711u g711a (select four codecs, and g723 is the first choice)

Note:

(1) For 2S2O there are 2 versions of Application rom, please check out the version of Application rom (rom –print). If the version is 2sipfxso729.102, 2S2O doesn't have the codec G.723.1. If the version is 2sipfxso723.102, 2S2O doesn't have the codec G.729 series.

(2) For 1S1O, the Application rom has the only one version which is named sipfxso.102 provide all codec.

-volume There are three adjustable value. **voice volume** stands for volume, which can be heard from Gateway side; **input gain** stands for volume, which the opposite party hears; **dtmf** volume stands for DTMF volume/level, which sends to its own Line.

Note: level of volume is too high or too low may be result in bad performance while connecting to each other.

-nscng silence suppression and comfort noise generation setting (1 = ON; 0 = OFF). It is applicable to G.723 codec only. An example is demonstrated below:

---

usr/config$ voice -nscng g723 1

-echo activate each canceler (1 = ON; 0 = OFF).
-mindelay the minimum jitter buffer size. (Default value= 90 ms)

-maxdelay the minimum jitter buffer size. (Default value= 150 ms)

---

usr/config$ voice –mindelay 90 –maxdelay 150

*Note: be sure to know well the application before you change **voice** parameters because this might cause incompatibility.*

4.2.18 [phone]

Gateway's progress tone is configurable. Default tone value is set according to U.S. tone specification. Users may adjust the values according to their own country's tone specification or users-defined tone specification.

---

usr/config$ phone

Phone ringing , ringback tone , busy tone , dial tone setting and notes
Usage:

phone [-ring [freq][ringON][ringOFF][ringLevel]]
[-rbt [freqHi][freqLo][freqHiLev][freqLoLev]
[Tone1ON][Tone1OFF][Tone2ON][Tone2OFF]]
[-bt [freqHi][freqLo][freqHiLev][freqLoLev]
[Tone1ON][Tone1OFF][Tone2ON][Tone2OFF]]
[-dt [freqHi][freqLo][freqHiLev][freqLoLev]
[Tone1ON][Tone1OFF][Tone2ON][Tone2OFF]]
[-flash [freqLo][freqHi]]
phone [-print [ring]\[rbt]\[bt]\[dt]\[flash]]

-print Display phone ringing/tone configuration.
ring : ringing
rbt : ringback tone
bt : busy tone
dt : dial tone
flash: flash tone
-ring ringing configuration set .

-rbt ringback tone configuration set .

-bt busy tone configuration set .
-dt dial tone configuration set .
-2dt second dial tone configuration set .
-flash flash configuration set .

Note:

ringing frequency : 15 ~ 100 (Unit : Hz)
ringing ring ON/OFF : 0 ~ 8000 (Unit : ms)
ringing level : 0 ~ 94 (Unit : V)
tone frequency : 0 ~ 65535 (Unit : Hz)
tone freqLevel : 0 ~ 65535 (Unit : mVrms)
tone Tone ON/OFF : 0 ~ 8000 (Unit : ms)

Example:

phone -print rbt
phone -ring 20 2000 4000 94
phone -rbt 480 440 8 8 2000 4000 2000 4000
phone -bt 620 480 8 8 500 500 500 500
phone -dt 440 350 8 8 500 1023 1023 1023
phone -flash 100 300

usr/config$

Parameters Usage:

-print print current call progress tone configurations (**ring** – ring tone, **rbt** – ring back tone, **bt** – busy tone, **dt** – dial tone, flash – flash). This parameter should be accompanied with tone type. For example:

---

usr/config$ phone -print rbt

Phone ring back tone paramter
Ringback Tone frequency high : 480
Ringback Tone frequency low : 440

Ringback Tone frequency high level : 13
Ringback Tone frequency low level : 13
Ringback Tone tone1 on : 100
Ringback Tone tone1 off : 200
Ringback Tone tone2 on : 1023
Ringback Tone tone2 off : 1023
usr/config$

Note:
For tone simulation, Gateway adopts dual frequencies as traditional telephone does. If users want to have their own call progress tone, they can change the value of tones. High and Low frequency/level/cadence can be configured respectively.

-ring to set RING Tone value.
The played tone type, when Gateway is receiving a call.
-rbt to set Ring Back Tone value
The played tone type, when Gateway receives a Q.931 Alerting message. In condition that Gateway is the originate side.
-bt to set Busy Tone value.
The played tone type, when destination is busy.
-dt to set Dial Tone value.
The played tone type, when off hook a phone set of workable Gateway.
-2dt to set the 2nd dial tone value.
The played tone type, when the unit accept the call hold function, it will generate the 2nd dial tone.
-flash set the detective flash range in ms, for example, 300-500 ms.

4.2.19 [tone]

This command is basically for FXO ports.

---

usr/config$ tone

Disconnect tone and remote ring back tone configuration
Usage:

---

tone [num][freqHi][freqLo][freqHiLev][freqLoLev]
[Tone1ON][Tone1OFF][Tone2ON][Tone2OFF]]
tone -print Display disconnect tone configuration.
[num] Tone index(1~4:Disconnect tone / 5~8:Remote ring back tone).
Example:
tone -print
tone 1 620 480 8 8 50 50 1023 1023

usr/config$

Parameter Usages:

-print show all tone configuration

[num] tone index. 1~4 is disconnect tone, 5~8 is remote ring back tone.

For FXO ports Gateway must detect disconnect tone to determine when to disconnect the call, so user must set disconnect tone of PBX or PSTN network connected to FXO ports.

When making a call from FXO ports, there are 2 ways to detect callee has already picked up the call, one is to detect reverse signal, the other is to detect the termination of ring back tone, so user must set ring back tone of PBX or PSTN network.

(If user doesn't know about the frequency of disconnect tone or ring back tone, please refer to ***[record]*** command to detect frequency.)

For each tone may has 1 set or 2 sets (high and low) of frequencies. If user wants to set 0 in on/off time, please set "1023" represent "0". (ex. ***tone 1 620 480 8 8 50 50 1023 1023***)

(***tone "index of tone" "frequency of high" "frequency of low" "level of high" "level of low" "on time of high" "off time of high" "on time of low" "off time of low"***)

4.2.20 [fxopwd]

This command is for FXO ports.

---

usr/config$ fxopwd

FXO password information and configuration
Usage:
fxopwd -add [passwd number][direction number]
fxopwd -delete index
fxopwd -modify index [passwd number][direction number]
fxopwd -print FXO password information.
passwd The password.
Example:
fxopwd -add passwd 1234
fxopwd -delete 1
fxopwd -modify 1 passwd 1234

usr/config$

Parameter Usages:

-print	show all FXO password configuration
-add	add 1 set of FXO password
-delete	delete 1 specific set of FXO password
-modify	modify 1 specific set of FXO password
passwd	password

4.2.21 [record]

User can record greeting and askpin file and analyze tone frequency by calling in FXO line of Gateway.

---

usr/config$ record

Recoed greeting voice and ask pin code voice, tone analize.
Usage:
record -greeting filename
-askpin filename
-tone
Example:

---

record -greeting greeting.100
record -askpin askpin.100
record -tone

usr/config$

Parameter Usages:

-greeting record greeting file. User must assign a file name for greeting, once record is finished, file recorded will be display in rom –print.

---

usr/config$ record -greeting test.100

Please off hook TEL 1 and press (N) for next step...
n

Press (R) to start record...
r

Press (S) to stop record...
.....
.....
.....s.....
.....
.....

Press (P) to play the voice or (W) to write to flash or (Q) to quit...
p
w

Please wait a moment...

Write flash ok...

Boot Rom : sdboot.200

Application Rom : fxso.100
DSP App : 48302ce3.300
DSP Kernel : 48302ck.300
DSP Test Code : 483cbit.bin
Greetings : test.100
Ask Pin : askpin.100
q
usr/config$

-askpin record askpin file. User must assign a file name for askpin file, once record is finished, file recorded will be display in rom –print.

---

usr/config$ record -askpin askpintest

Please off hook TEL 1 and press (N) for next step...
n

Press (R) to start record...
r

Press (S) to stop record...
.....
.....
.....
.....
.....
.....s.....
.....
.....
.
Press (P) to play the voice or (W) to write to flash or (Q) to quit...
p
w

Please wait a moment...

Write flash ok...

Boot Rom : sdboot.200
Application Rom : fxso.100
DSP App : 48302ce3.300
DSP Kernel : 48302ck.300
DSP Test Code : 483cbit.bin
Greetings : greeting.100
Ask Pin : askpintest
q
usr/config$

Note: Remember to press enter after press any command.

-tone analyze tone frequency. Gateway can analyze tone frequency as user provide tone in FXO Line1.

---

usr/config$ record -tone

Press (R) to start record...
r
.....
.....
.....
.....

Analyzing!! Please wait a moment……..
Frequency 1 : 480
Frequency 2 : 620
Frequency 3 (2623) is more than 1000, please ignore it.
usr/config$

Note:

1. ***Record ring back tone: user can use FXS Line1 to call FXO Line1, after hearing ring back tone, use this command to detect frequency of ring back tone.***
2. ***Record disconnect tone: Please read the procedure of recording disconnect tone file from the web site in application.***
3. ***The value of disconnect tone and ring back tone will not write in flash automatically. Please use the command in "tone" to write in the tone table.***

The Procedures of recording the disconnect tone

Before you start ：

A PSTN line which connect with the Line 1 port.
A analog phone connect with the Tel 1 port.
Configure Peer-to-Peer mode.

Please record the disconnect tone just follow the stage as below ：

1. Please enter the command before you record the disconnect tone：
   record –tone
2. Make a call from PSTN side into Line 1 port.
3. You will get a greeting when the call enter the gateway.
4. Pease dial the number of the Tel 1 port.
5. The phone will ring if the number you dial is correct.
6. Pick up the phone and make sure the call is connect.
7. Hang up the phone which is from PSTN side and Tel 1 port will get the disconnect tone.
8. When you get the disconnect tone from the phone set of the Tel 1 port, press <**R**> and <**ENTER**> buttons to start recording the disconnect tone.
9. Please hang up the phone if you get the message as below：*Analizing!! Please wait a moment…*
10. There are three values you will get after analyzing. Please leave the value which is over 1000 Hz, this is not the frequency of disconnect tone.
11. Please put the frequency in the tone table just follow the command：
    tone 4 420 680 8 8 25 25 50 50

【Example-1】

(Make a call from PSTN to FXO port)
usr/config$ record -tone

Press (R) to start record...
(Please make sure that you are already finish the steps 2 ~ 7)
r (Press “Enter” button after you key in “R”)
.....
.....
.....
.....

Analizing!! Please wait a moment...
(You coule hang up the call from PSTN if you get this message)

Frequency 1 : 481
Frequency 2 (2623) is more than 1000, please ignore it.
Frequency 3 : 621

tone 4 481 621 8 8 25 25 1023 1023
(Put this value in to the tone table)

tone –print

Disconnect tone 1 paramter
Frequency high : 620
frequency low : 480
frequency high level : 8
frequency low level : 8
Tone1 on : 25
Tone1 off : 25
Tone2 on : 1023

Tone2 off : 1023
Disconnect tone 2 paramter
Frequency high : 450
frequency low : 0
frequency high level : 8
frequency low level : 0
Tone1 on : 35
Tone1 off : 35
Tone2 on : 1023
Tone2 off : 1023
Disconnect tone 3 paramter
Frequency high : 620
frequency low : 480
frequency high level : 8
frequency low level : 8
Tone1 on : 50
Tone1 off : 50
Tone2 on : 1023
Tone2 off : 1023
Disconnect tone 4 paramter
Frequency high : 621
frequency low : 481
frequency high level : 8
frequency low level : 8
Tone1 on : 25
Tone1 off : 25
Tone2 on : 50
Tone2 off : 50
(Confirm the values is correct or not)

(Key in the commit and reboot command if you finish the procedures as above)
【Example-2】
(Make a call into FXO port)
usr/config$ record -tone

Press (R) to start record...
(Please make sure that you are already finish the steps 2 ~ 7)

r (Press “Enter” button after you key in “R”)

……..……

……

……

…….....

Analizing!! Please wait a moment...
(You coule hang up the call from PSTN if you get this message)

Frequency 1 : 473
Frequency 2 (2623) is more than 1000, please ignore it.
Frequency 3 (1856) is more than 1000, please ignore it.

tone 4 473 473 8 8 25 25 1023 1023
(Please configure the high and low frequency as the same value if you just get a singal frequency)

tone –print

Disconnect tone 1 paramter
Frequency high : 620
frequency low : 480
frequency high level : 8
frequency low level : 8
Tone1 on : 25
Tone1 off : 25
Tone2 on : 1023
Tone2 off : 1023
Disconnect tone 2 paramter
Frequency high : 450
frequency low : 0
frequency high level : 8
frequency low level : 0
Tone1 on : 35
Tone1 off : 35
Tone2 on : 1023
Tone2 off : 1023

Disconnect tone 3 paramter

Frequency high : 620
frequency low : 480
frequency high level : 8
frequency low level : 8
Tone1 on : 50
Tone1 off : 50
Tone2 on : 1023
Tone2 off : 1023

Disconnect tone 4 paramter

Frequency high : 621
frequency low : 481
frequency high level : 8
frequency low level : 8
Tone1 on : 25
Tone1 off : 25
Tone2 on : 50
Tone2 off : 50

(Confirm the values is correct or not)

(Key in the commit and reboot command if you finish the procedures as above)

4.2.22 [tos]

IP Packet ToS(type of Service)/Differentiated Service configuration.

---

usr/configtos

IP Packet ToS(type of Service)/Differentiated Service configuration
Usage:
tos [-rtptype dscp]
tos [-sigtype dscp]
tos -print
[-rtpreliab mode]
tos -print

Example:
tos -rtptype 7 -sigtype 0

Parameter Usages:
-rtptype the packages of voice
-sigtype the package of call signal

Note:
The value of rtptype and sigtype is from 0 to 63.
It's working if it supported by your network.

4.2.23 [pt]

RTP payload type configuration and information

---

usr/config$ pt

RTP payload type configuration and information
Usage:
pt-print Display the RTP payload type information
-rfc2833 Configure the DTMF RFC2833 payload type
-dtmf Configute the DTMF payload type
-fax Configure the FAX payload type
-faxbypass Configure the FAX ByPass payload type
-modembypass Configure the MODEM ByPass payload type

-redundancy Configure the Redundancy payload type
-modemrelay Configure the MODEM Relay payload type

Example:
pt -rfc2833 96 -fax 101

usr/config$

4.2.24 [rom]

ROM file information and firmware upgrade function.

---

usr/config$ rom

ROM files updating commands
Usage:
rom [-print][-app][-boot][-dsptest][-dspcore][-dspapp][-greet][-askpin]
-s TFTP/FTP server ip -f filename
rom -print
-print show versions of rom files. (optional)
-app update main application code(optional)
-boot update main boot code(optional)
-boot2m update 2M code(optional)
-dsptest update DSP testing code(optional)
-dspcore update DSP kernel code(optional)
-dspapp update DSP application code(optional)
-greeting update greeting voice file(optional)
-askpin update ask pin code voice file(optional)
-s IP address of TFTP/FTP server (mandatory)
-f file name(mandatory)
-method download via TFTP/FTP (TFTP: mode=0, FTP: mode=1)
-ftp specify username and password for FTP
Note:
This command can run select one option in 'app', 'boot',
, 'dsptest', 'dspcore', and 'dspapp'.
Example:
rom -method 1

---

rom -ftp vwusr vwusr
rom -app -s 192.168.4.101 -f app.bin

usr/config$

Parameter Usages:

-print show versions of all rom files

-app, boot, boot2m, dsptest, dspcore, dspapp, greeting, askpin to update main Application program code, Boot code, DSP testing code, DSP kernel code, DSP application code, greeting file, askpin file.

-s to specify TFTP server's IP address when upgrading ROM files.

-f to specify the target file name, which will replace the old one.

-method to decide using TFTP or FTP as file transfer server. "0" stands for TFTP, while "1" stands for FTP.

-ftp if users choose FTP in above item, it is necessary to specify pre-defined username and password when upgrading files.

4.2.25 [passwd]

For security concern, users have to input the password before entering configuration mode. "**passwd**" command is for password setting purpose.

---

usr/config$ passwd

Password setting information and configuration
Usage:
passwd -set Loginname Password
passwd -clean
Note:
1. Loginname can be only 'root' or 'administrator'
2. passwd -clean will clear all passwd stored in flash, please use it with care.
Example:
passwd -set root Your_Passwd_Setting

---

usr/config$

Parameter Usages:

-set

(***passwd –set "login name" "password"***)

Note : "login name" can be "***root***" or "***administrator***" only. "root" and "administrator" have the same authorization, except some commands that can be executed by "root" only – "***passwd –clean***", "***rom –boot***", "***rom –bot2m***" and "***flash –clean***".